






ClickFix 76 VARIO V2 90 cm

8  


x 2 K1-21890 90cm

9  


K1-21860 60cm
x 2 K1-21870 70cm

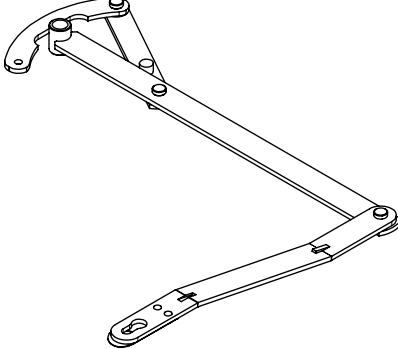10 

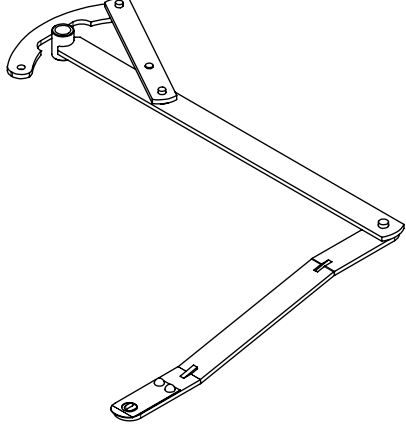

x 1 K2-17290

11 


x 1 K2-17291

12 


x 2 K2-17286

13 




x 6 K3-02520
M6 x 20

14 



x 2 R1-61410

15 


x 2 C2-15250

16 



x 4 K3-02054
M5 x 20

17 



x 10 R1-63200
Ø6 x 80

18 


x 1 K1-20648

19 



x 1 K2-20636

20 



x 1 K1-20634

21 


x 1 K1-20633

22 



x 6 K3-03026
M6

23 




x 6 K3-04026
Ø6,4

24 



x 4 H1-21340

25 

x 4 K3-08126


26  

x 2 K1-21390 90cm


27  

K1-21360 60cm
x 2 K1-21370 70cm


1

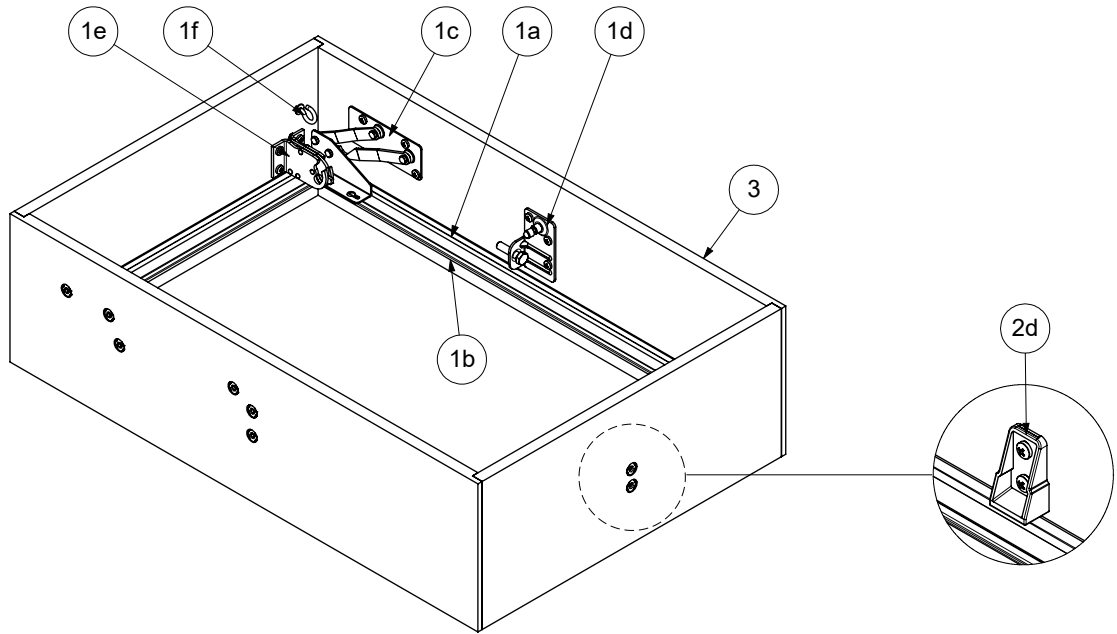

2

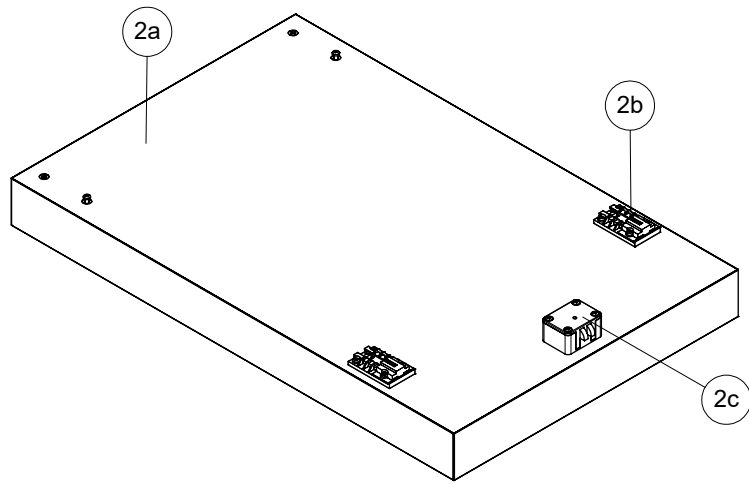


3

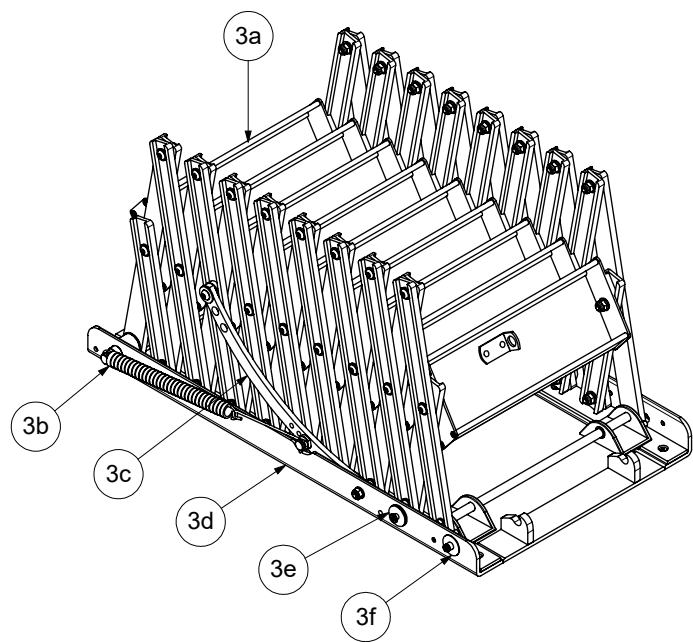

9
No. 1006010

30A




28




x 2
K3-06013
Ø4 x 20

29




x 1
K2-17295

30





x 1
K1-17299

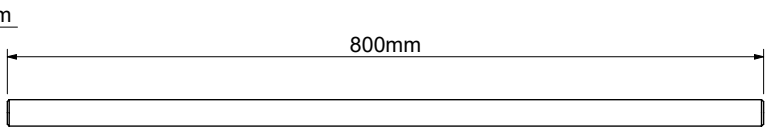

1

8 9

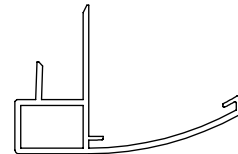

26 27



2

3

4



5

6

7

24

25






26






27






33



2

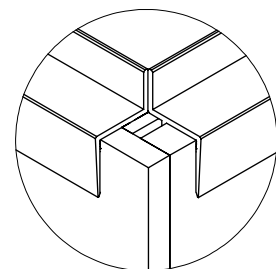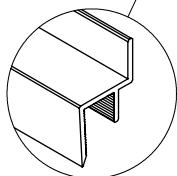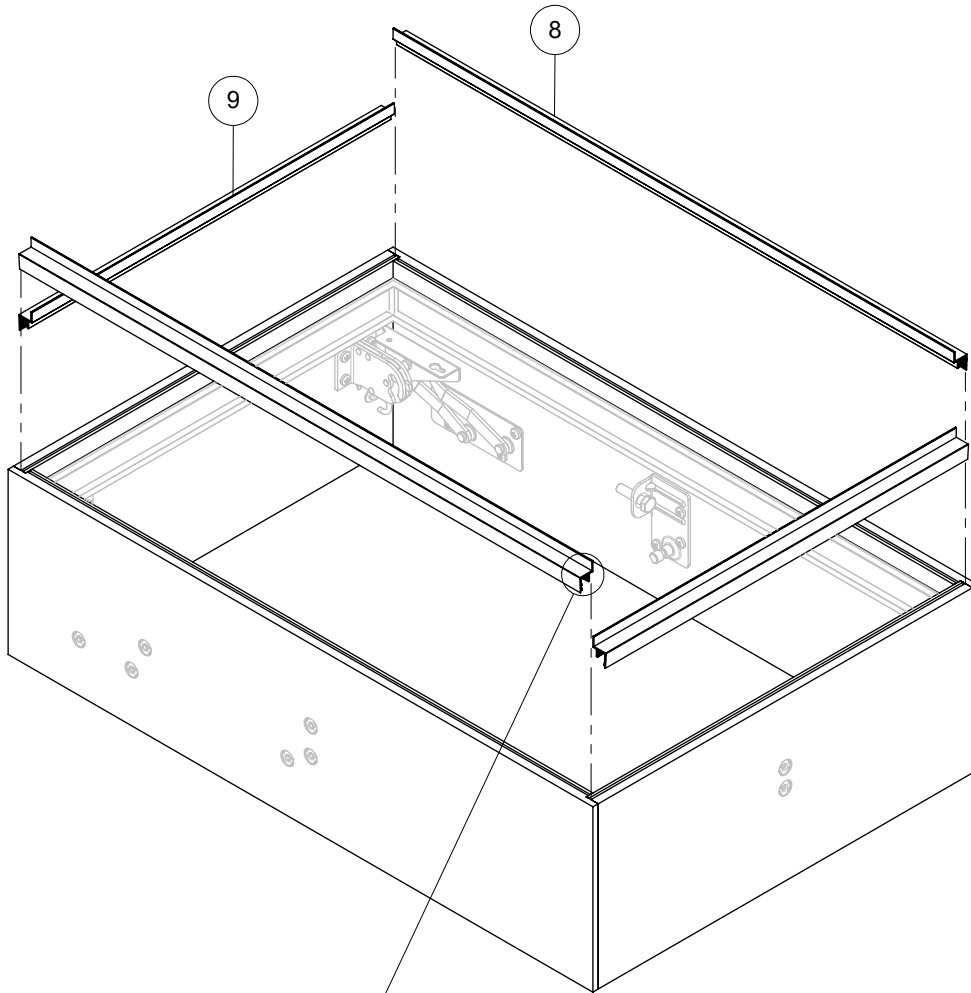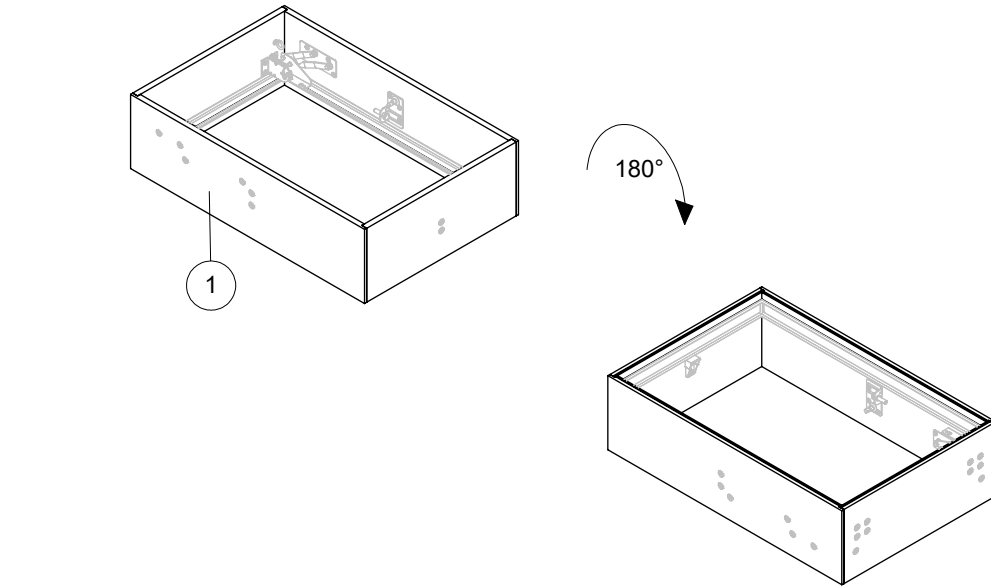

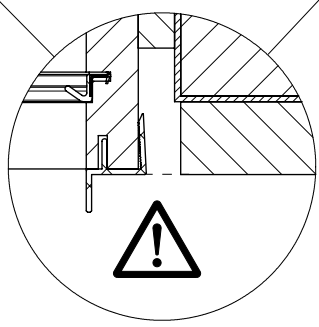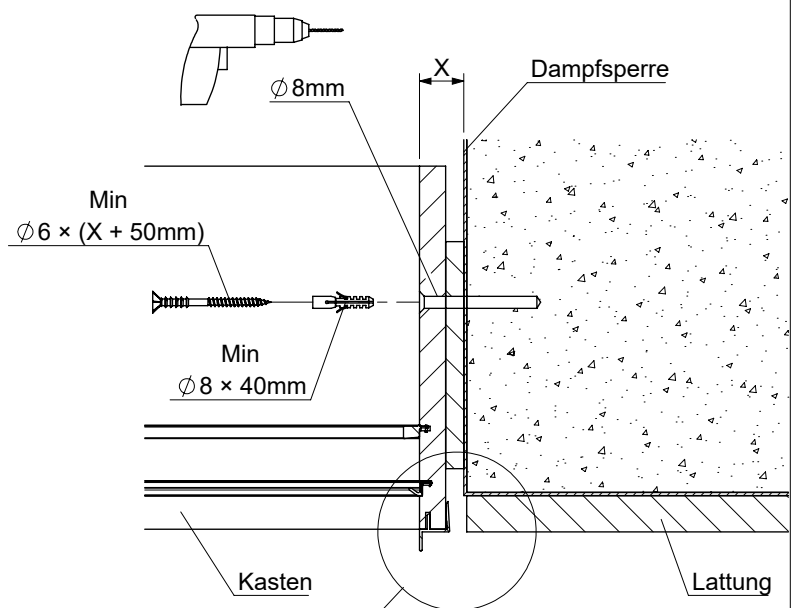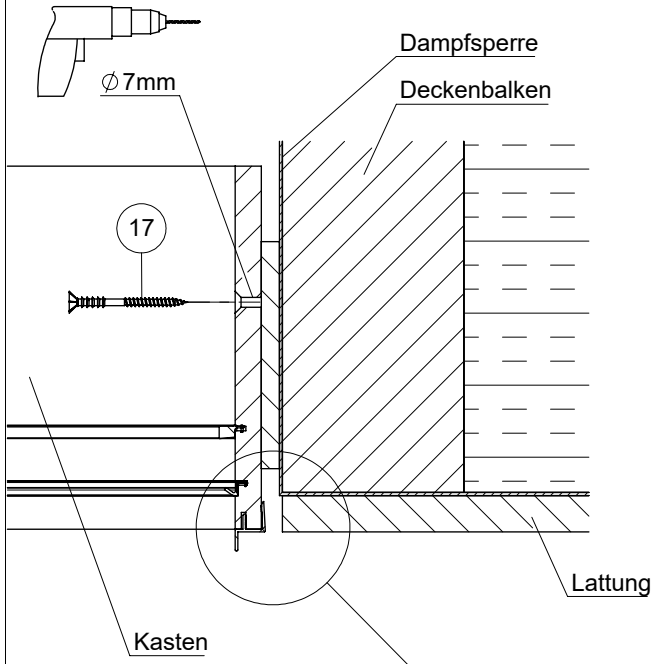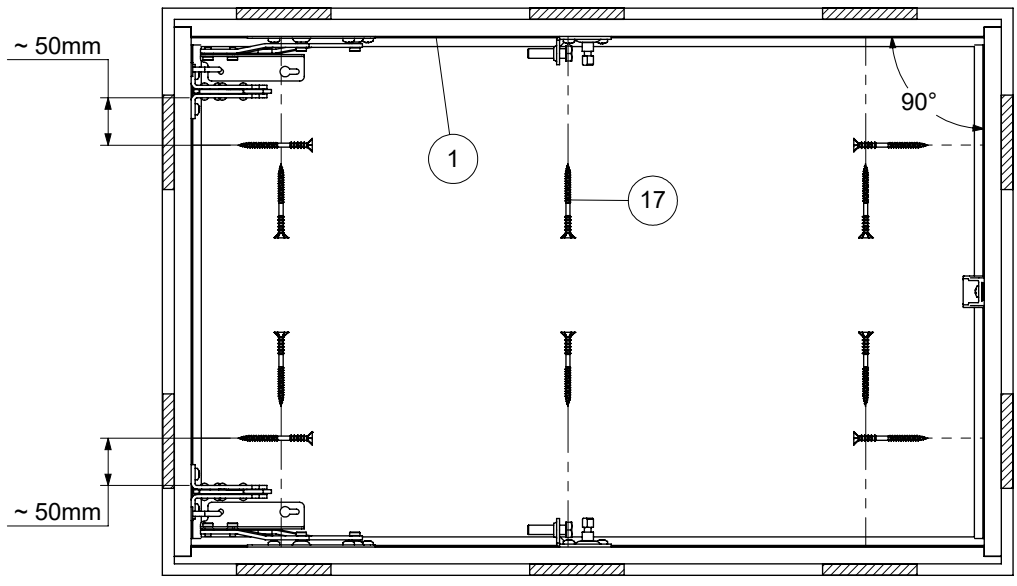

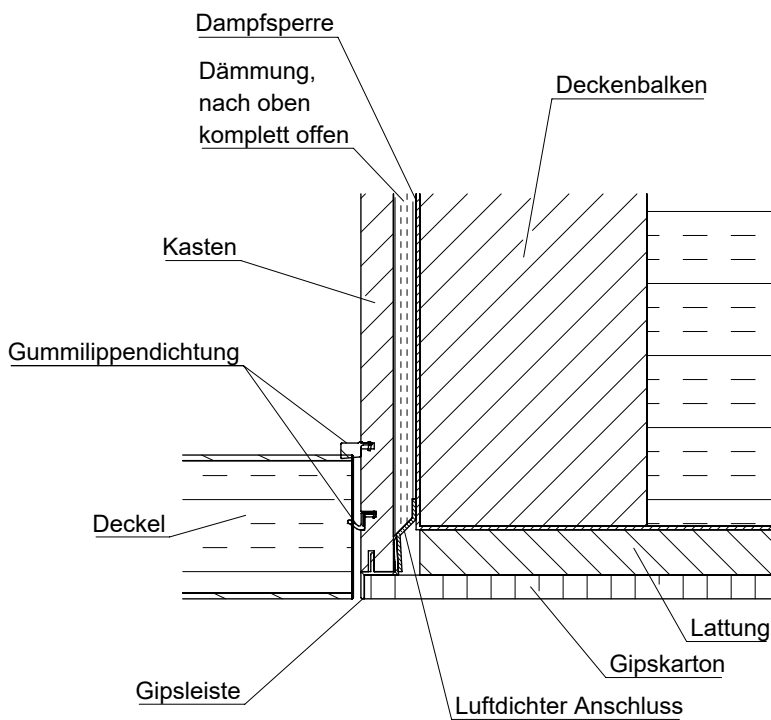
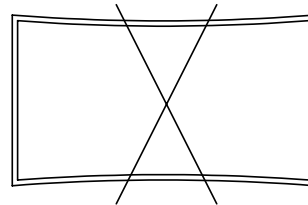
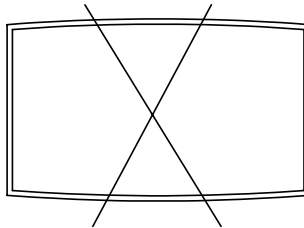
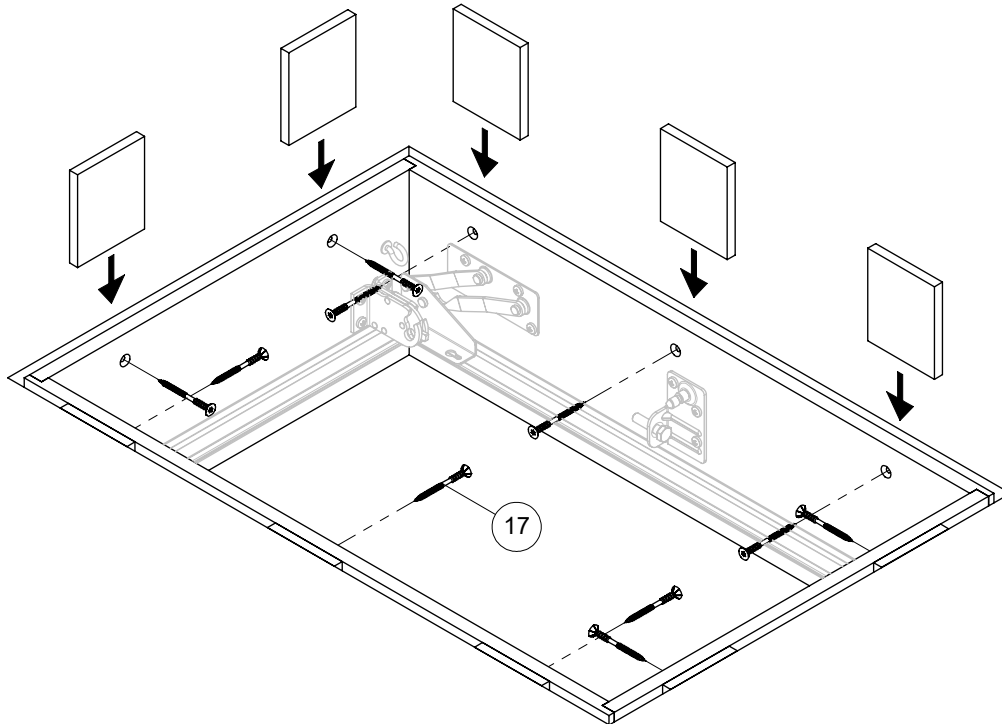








ACHTUNG:

Unbedingt den luftdichten Anschluss des Lukenkastens unten an die Decke und die Zwischenraumdämmung bauseits durchführen.





5

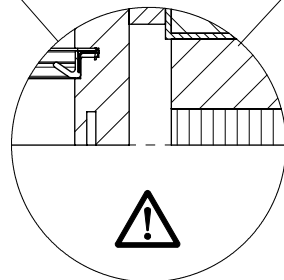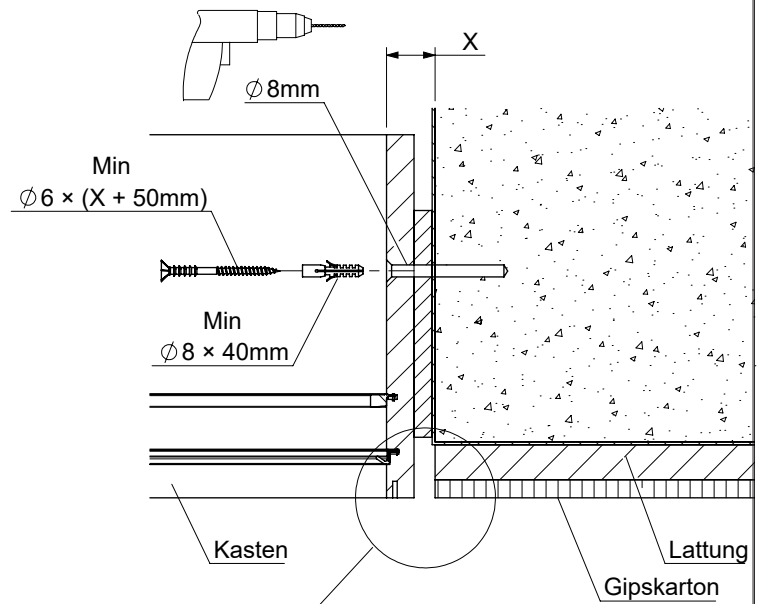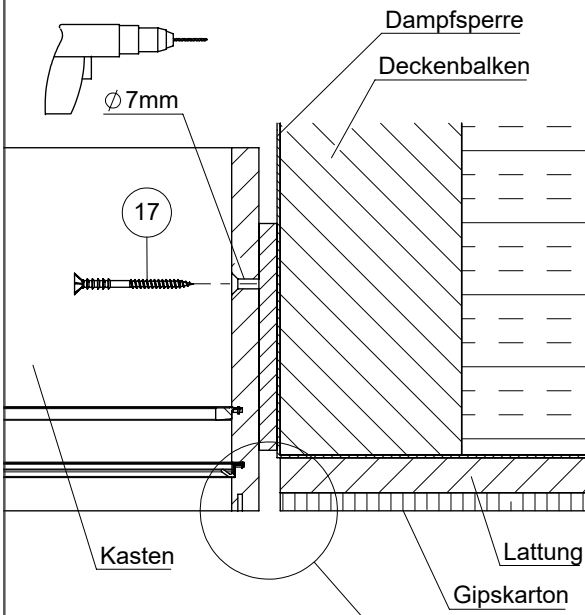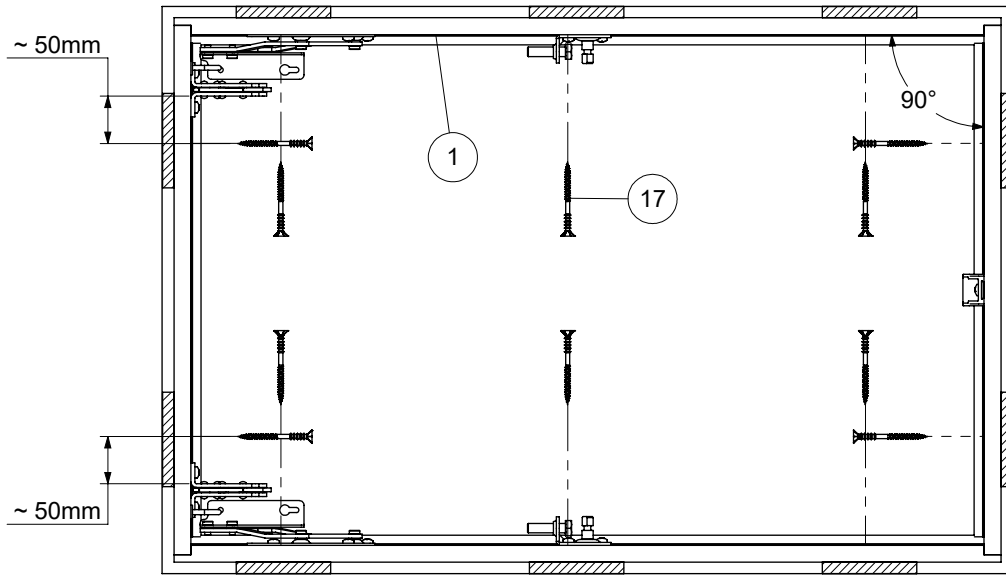


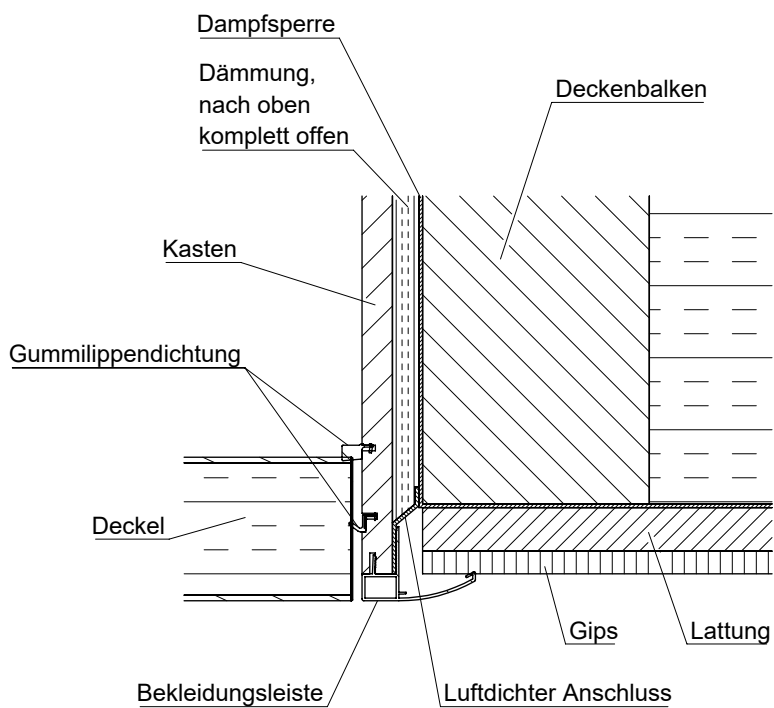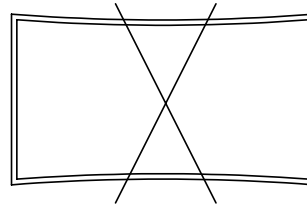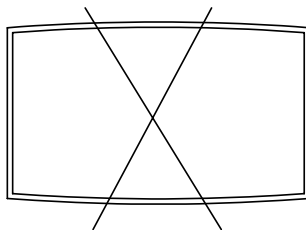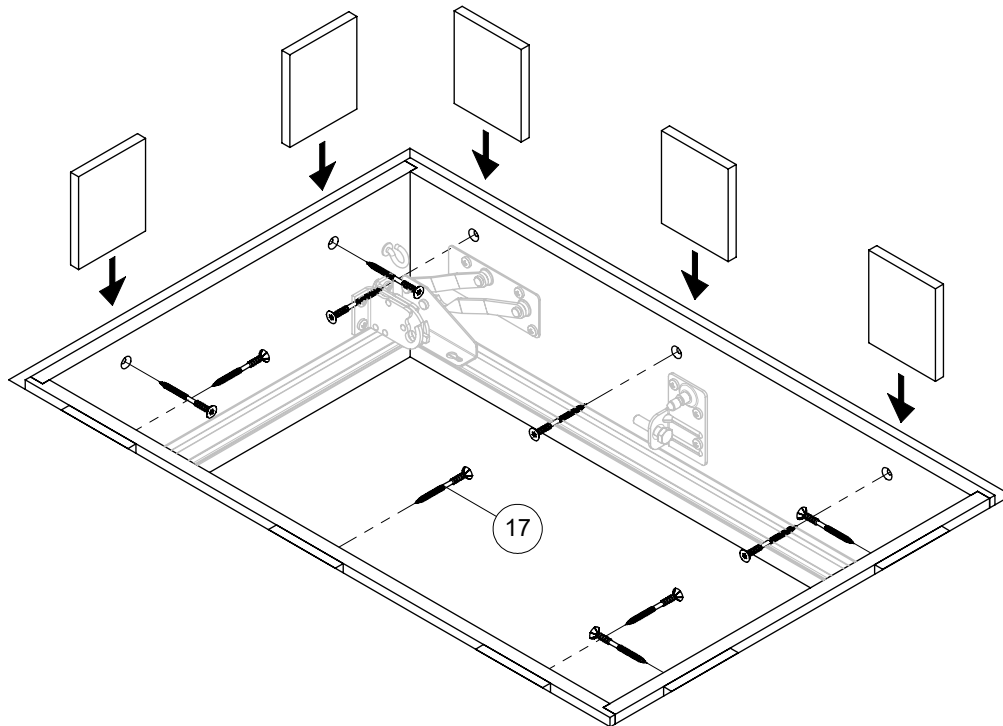



ACHTUNG:

Unbedingt den luftdichten Anschluss des Lukenkastens unten an die Decke und die Zwischenraumdämmung bauseits durchführen.



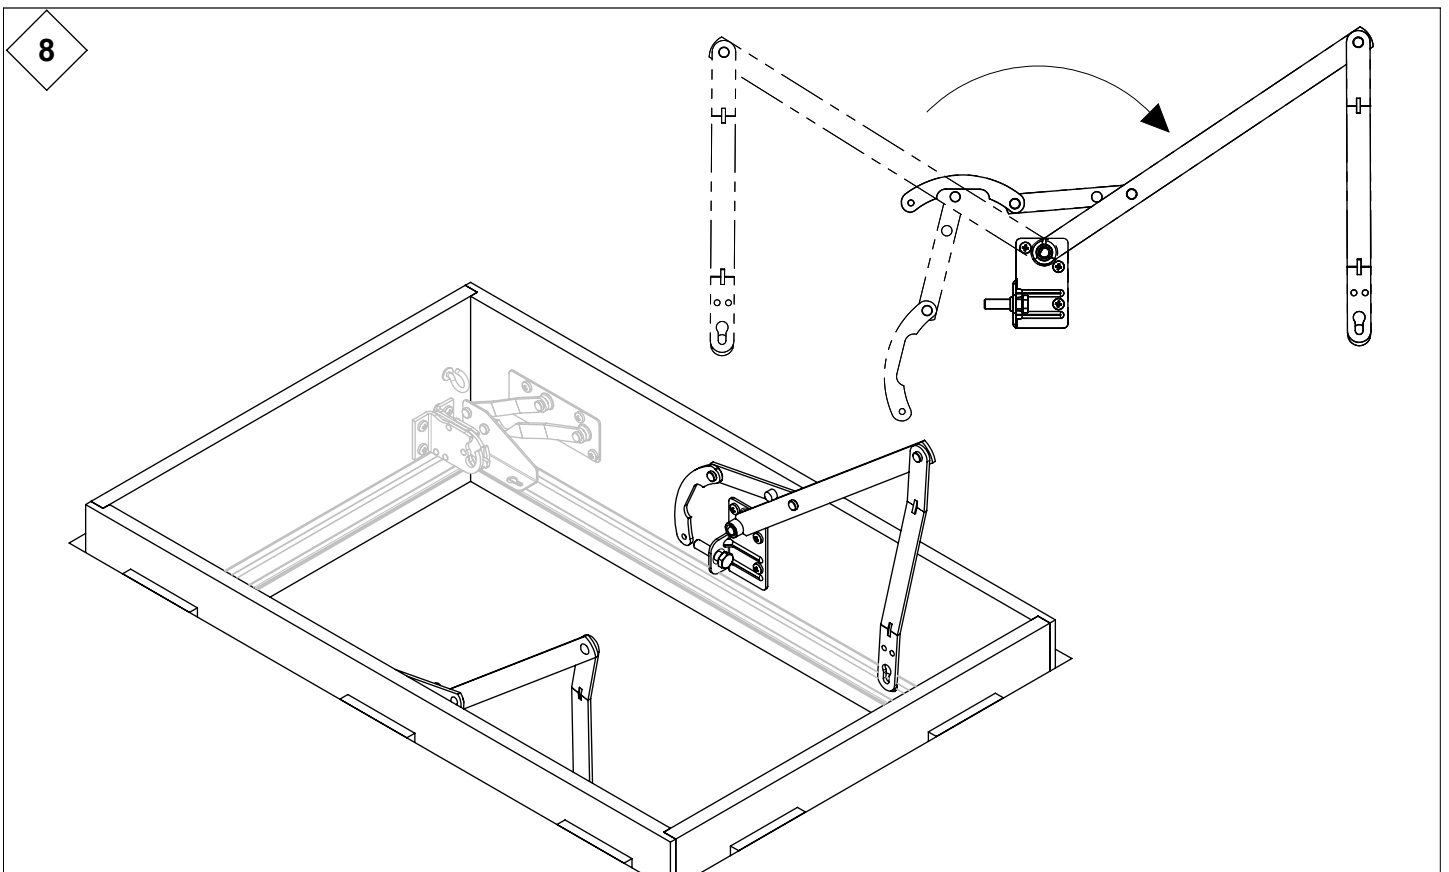
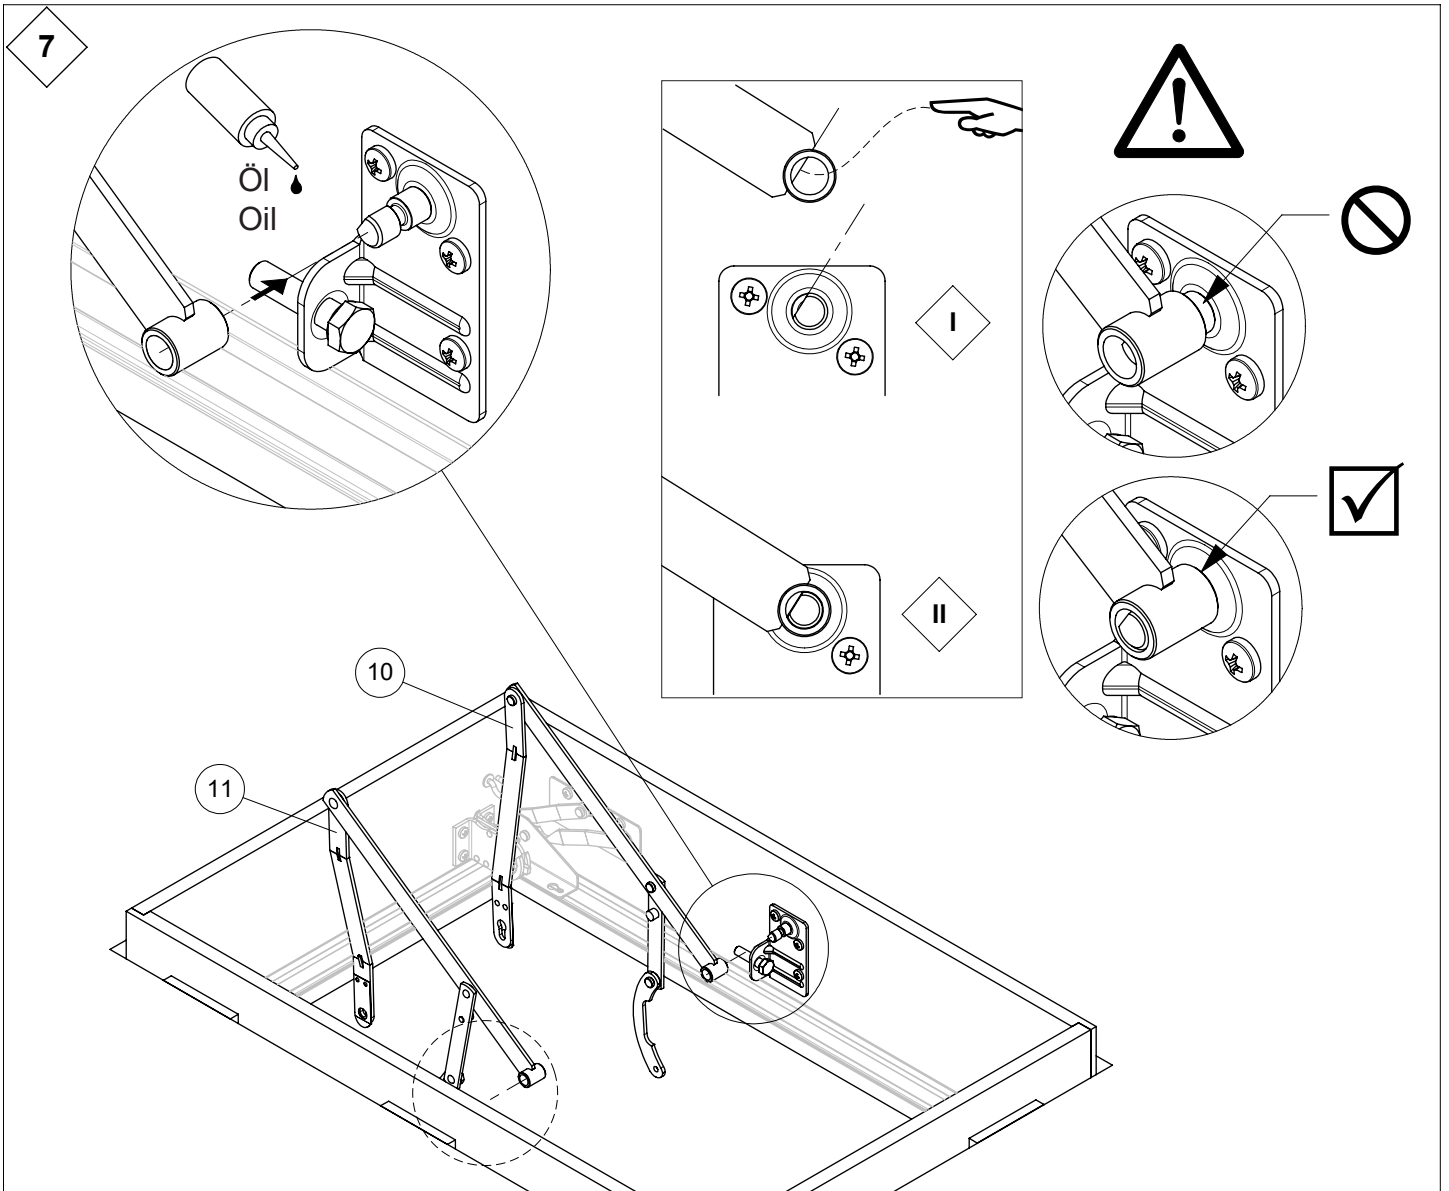






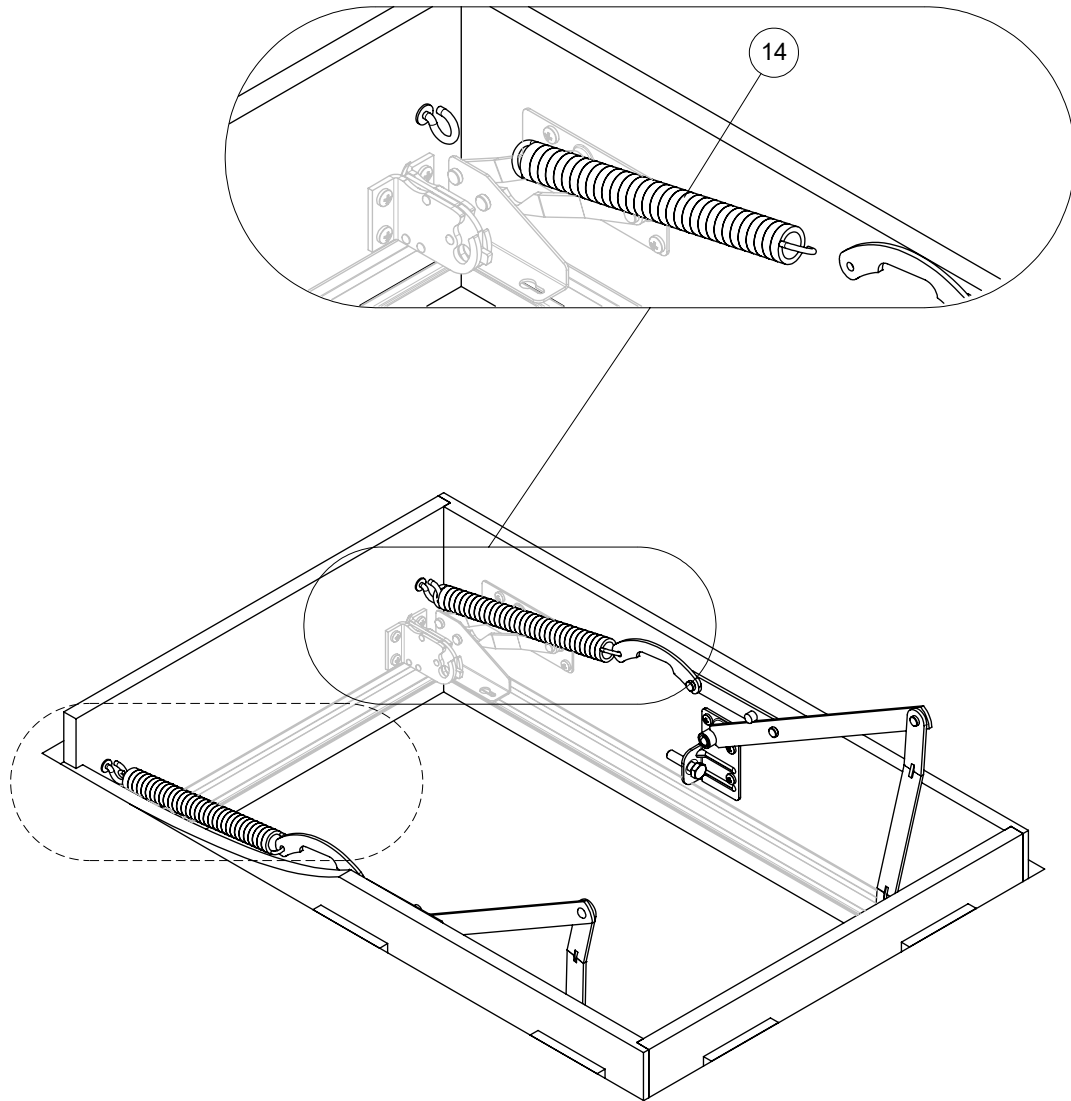




10

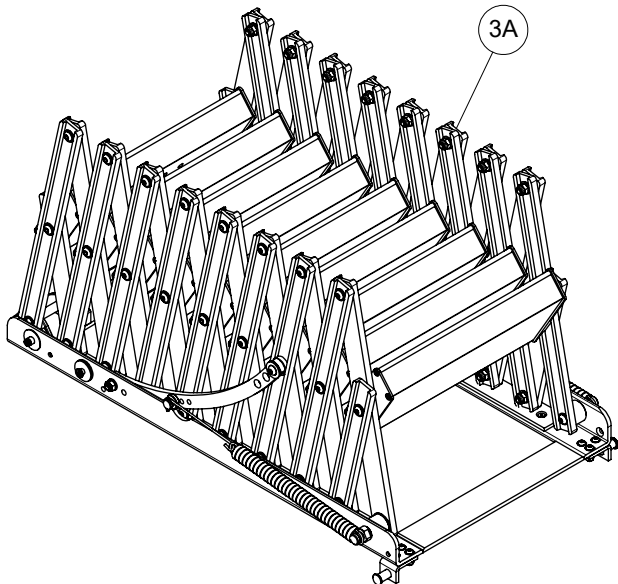
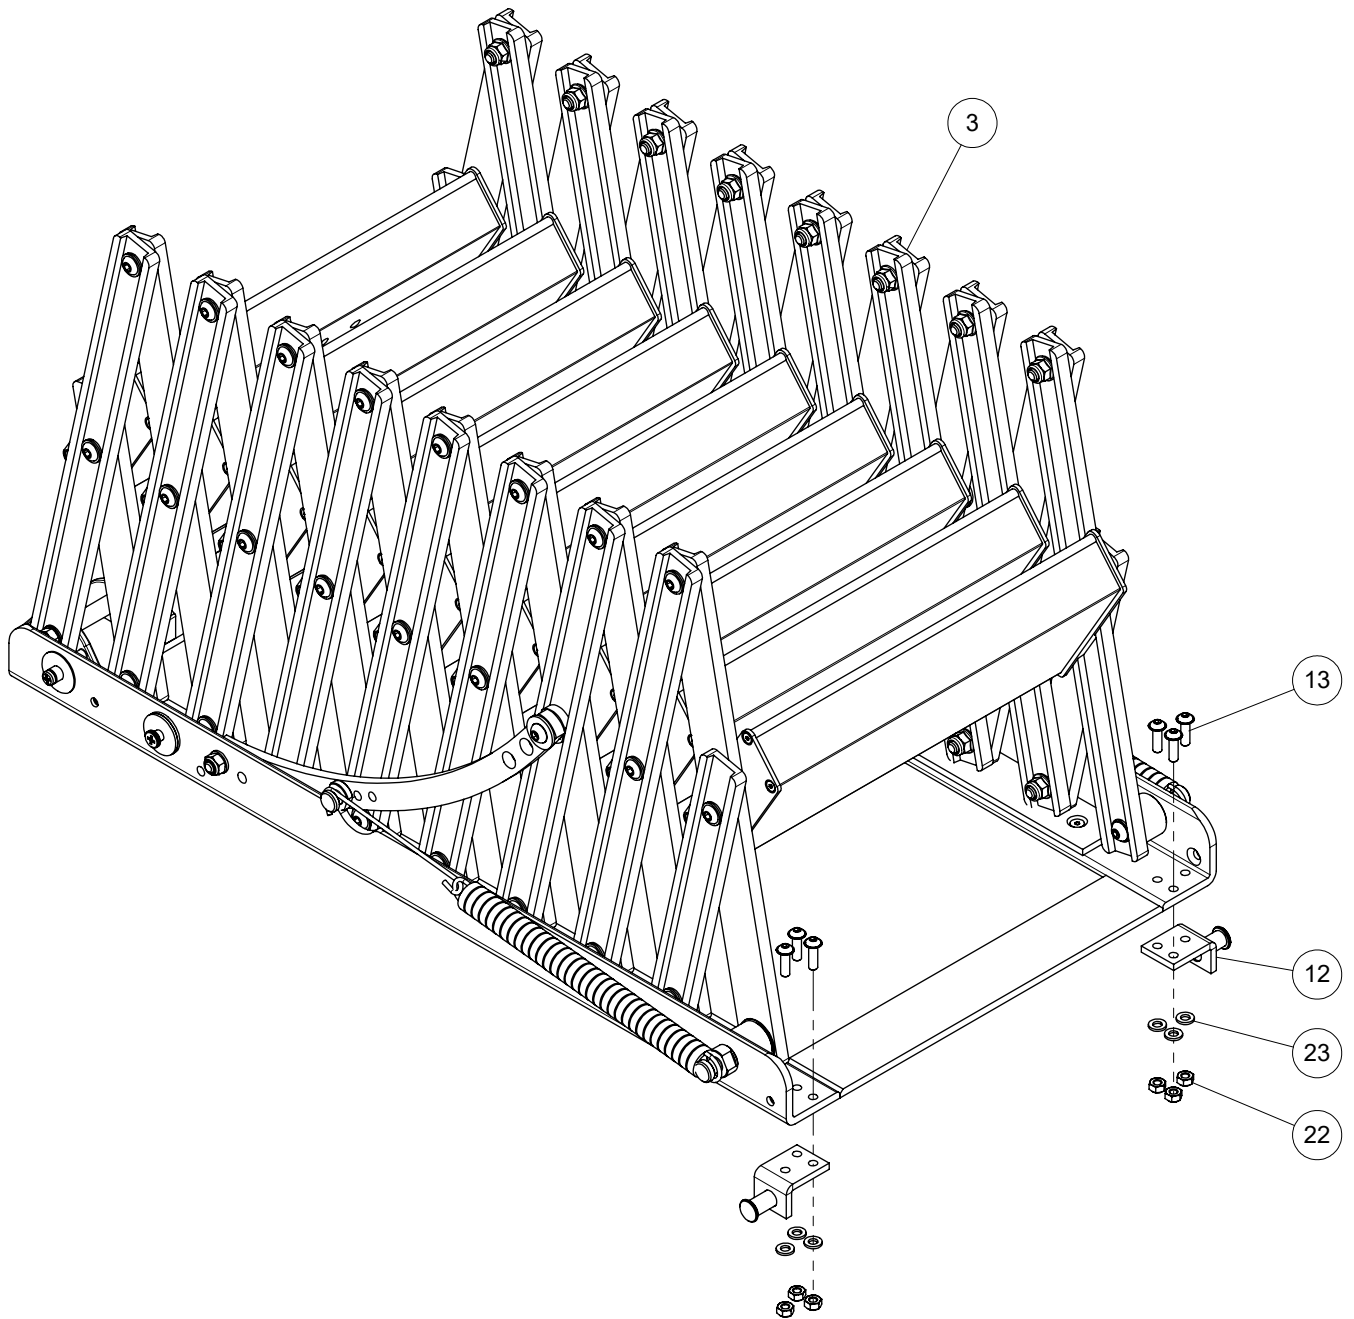


11

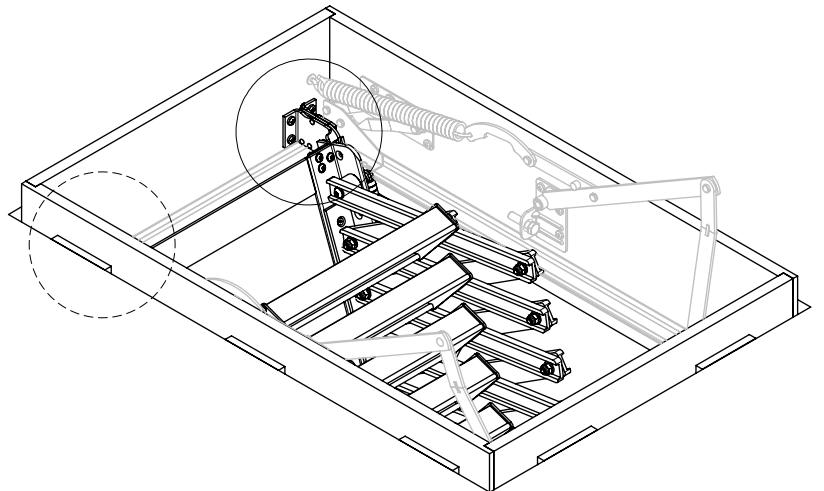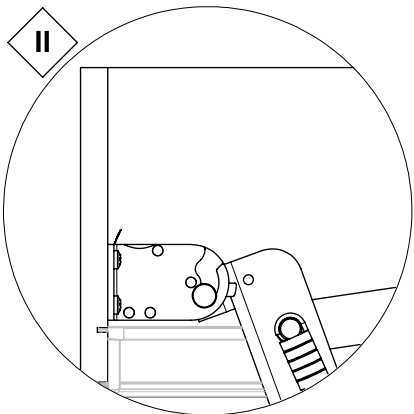
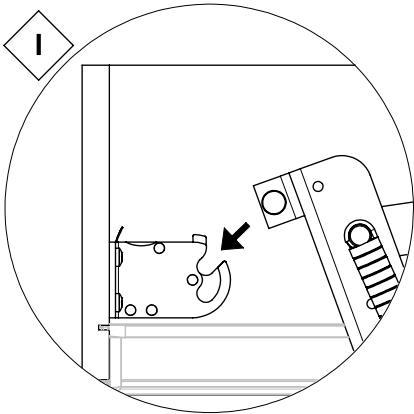
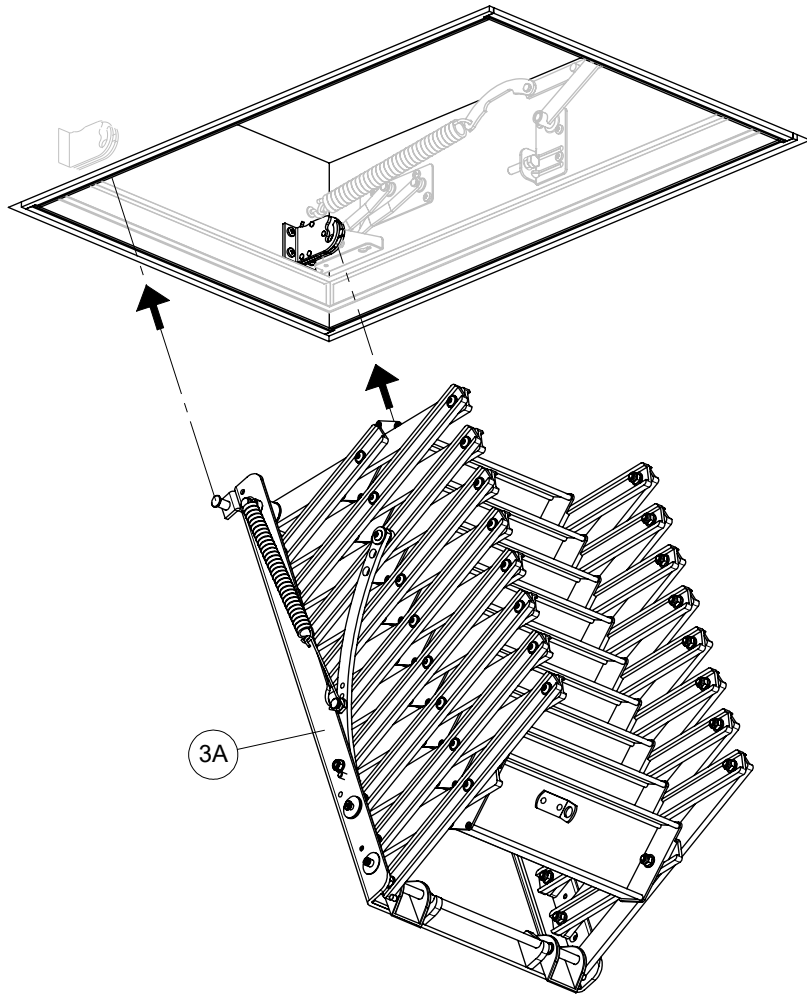


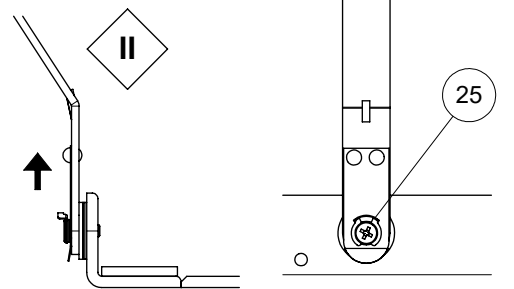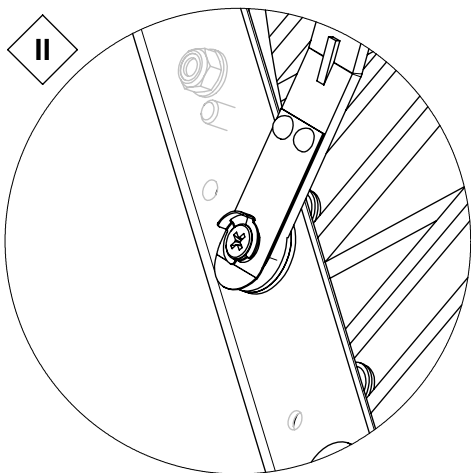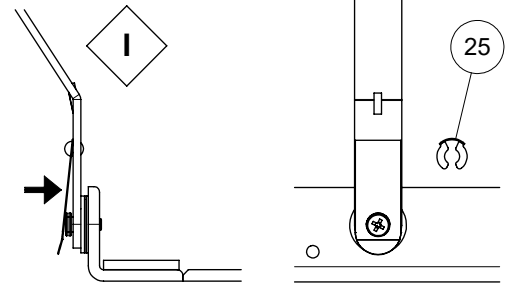
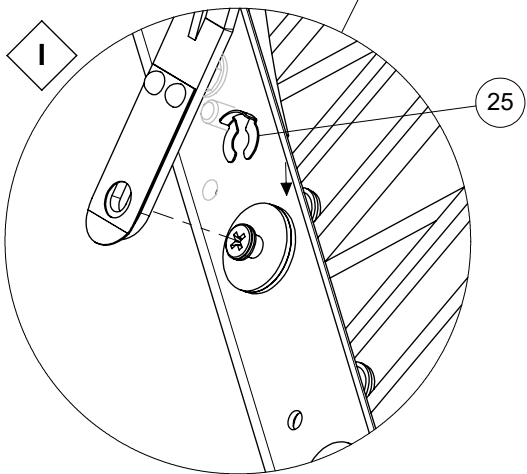
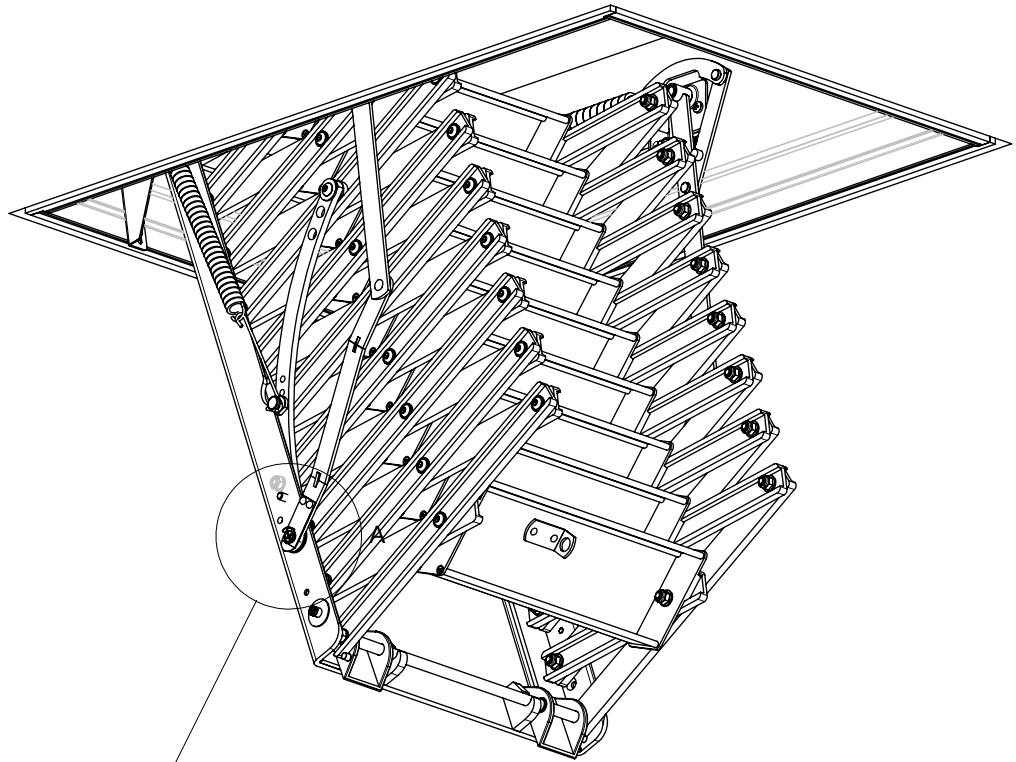


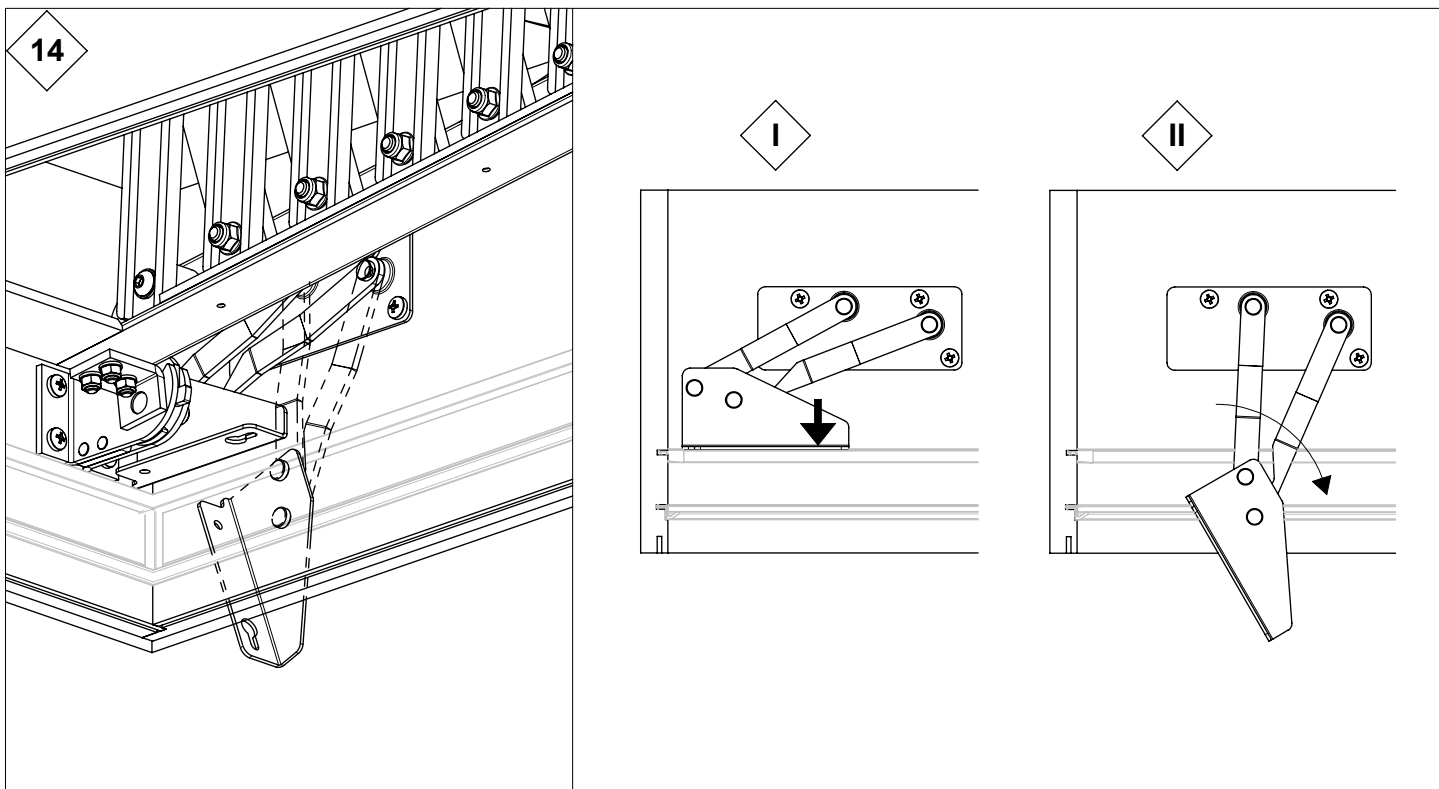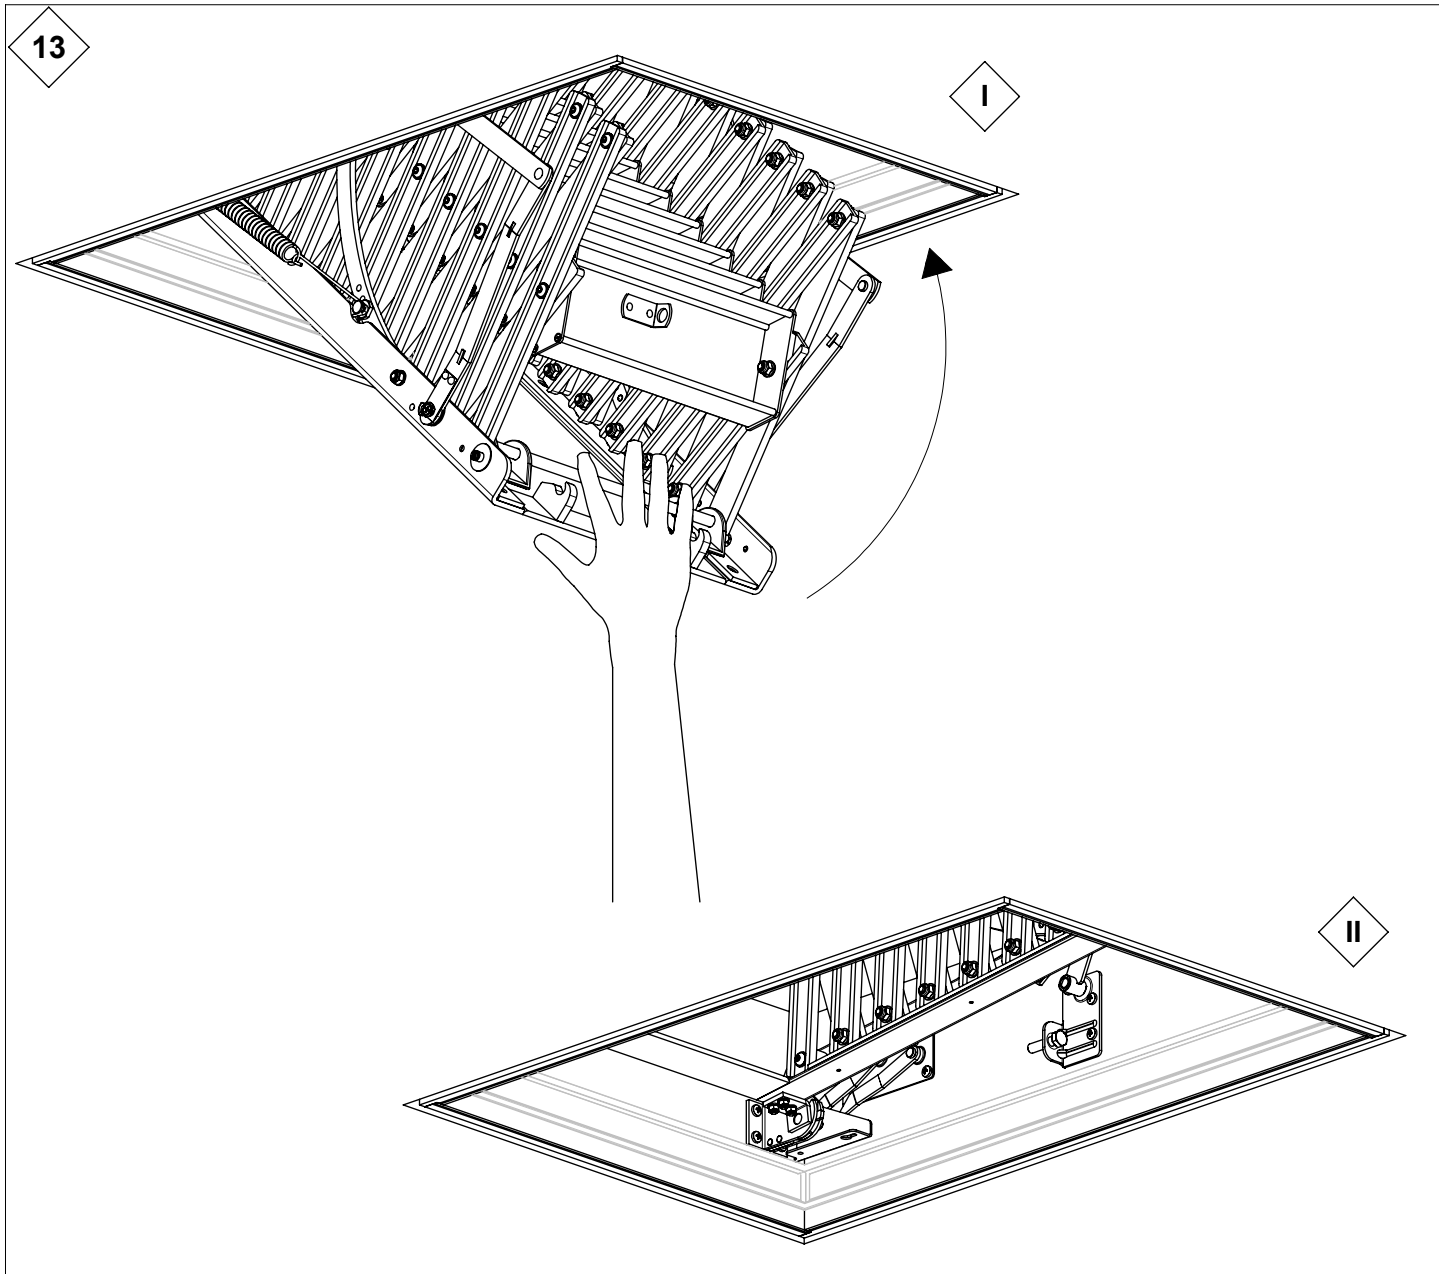

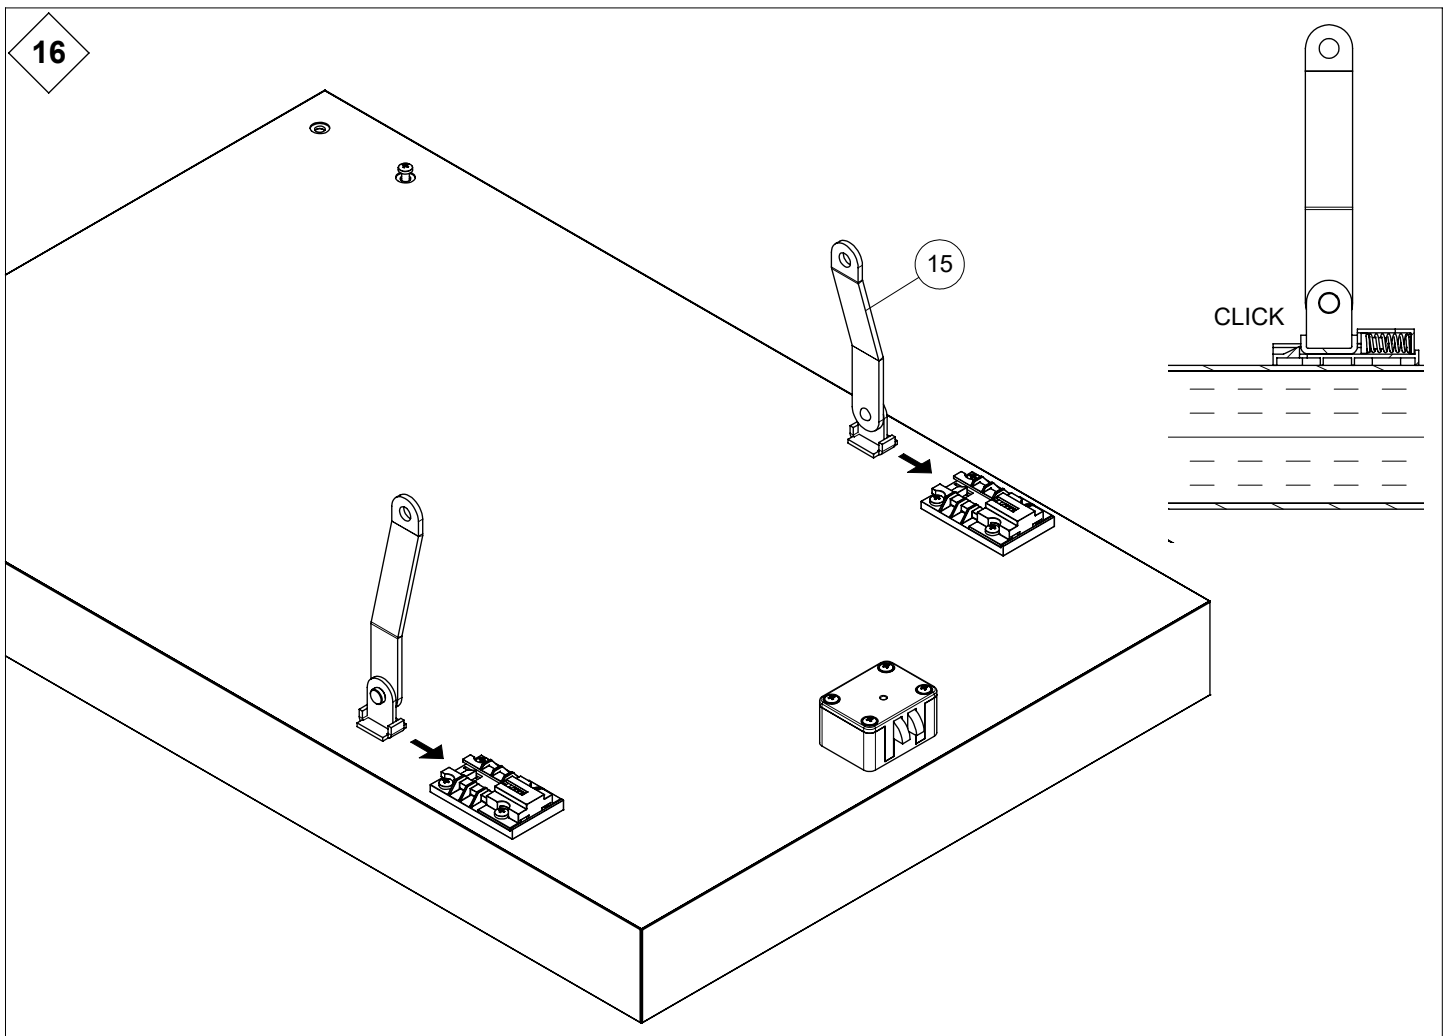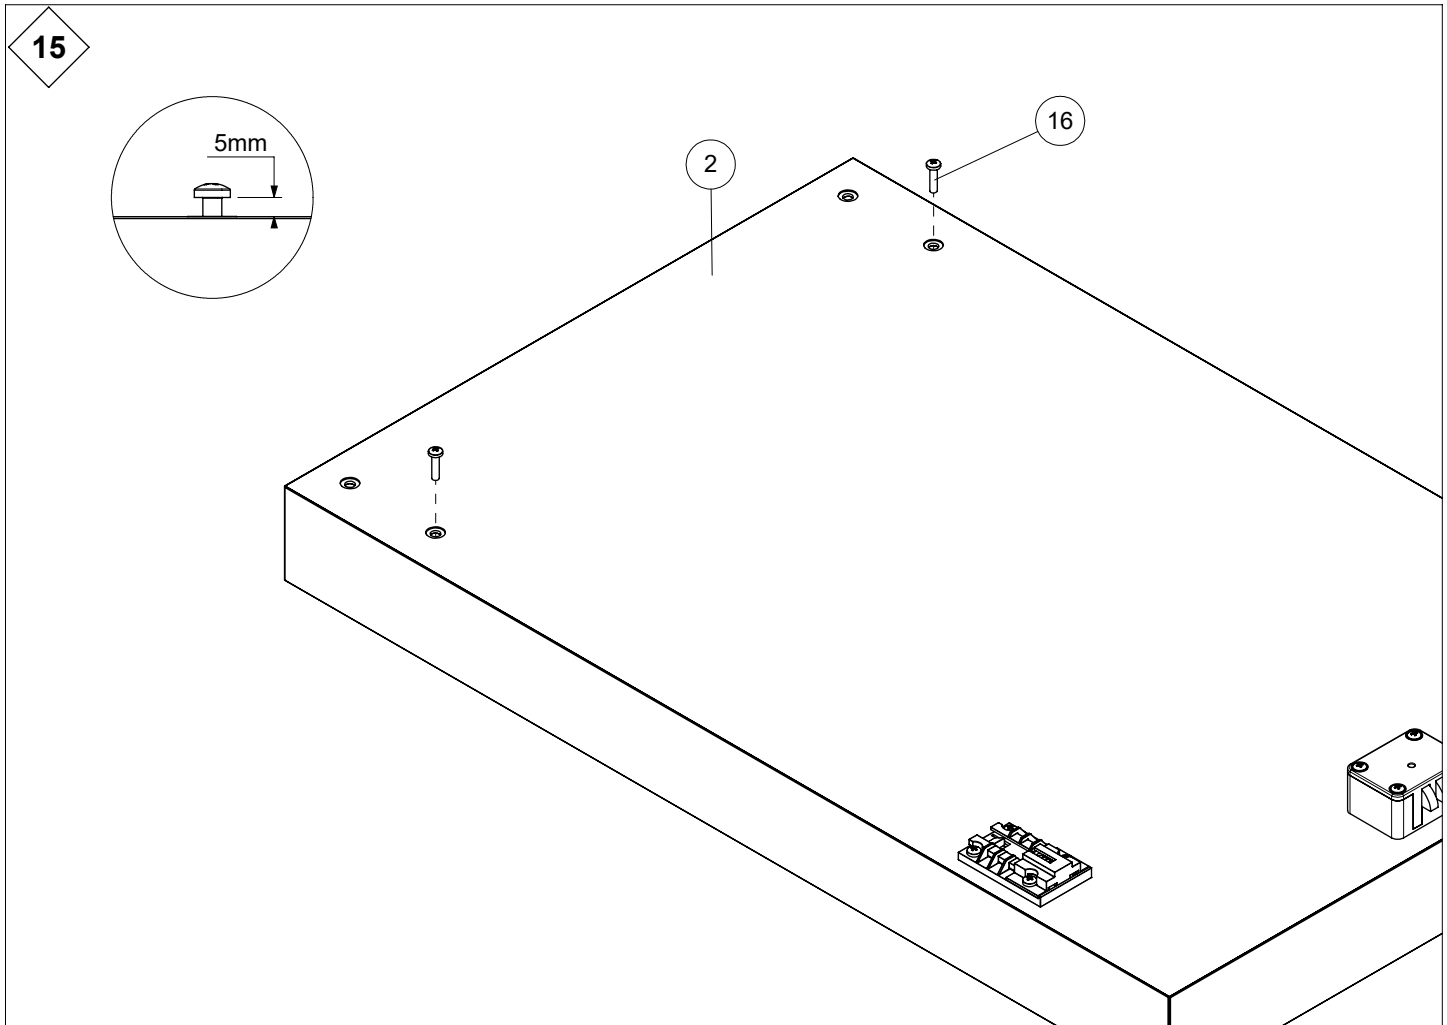


17

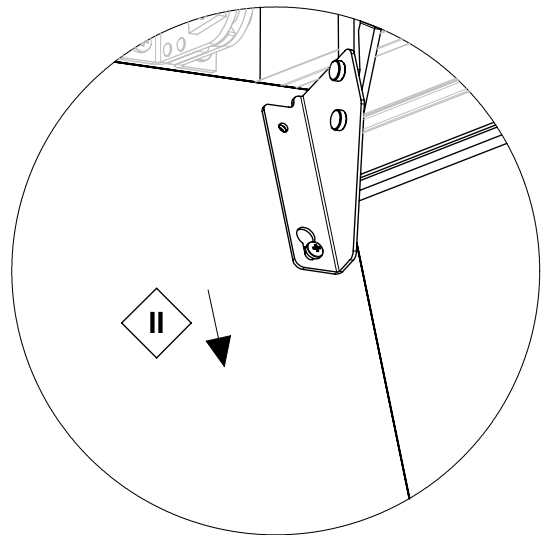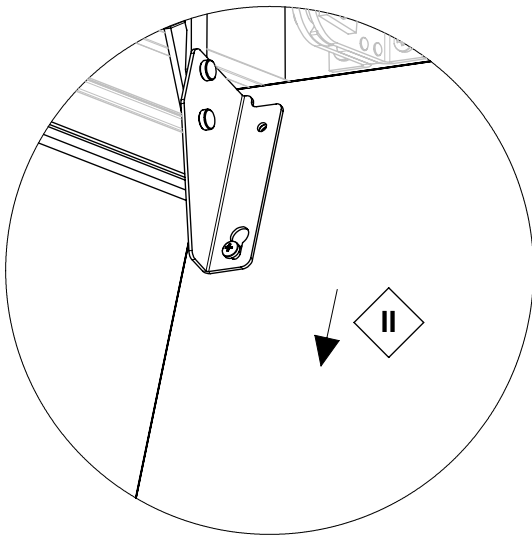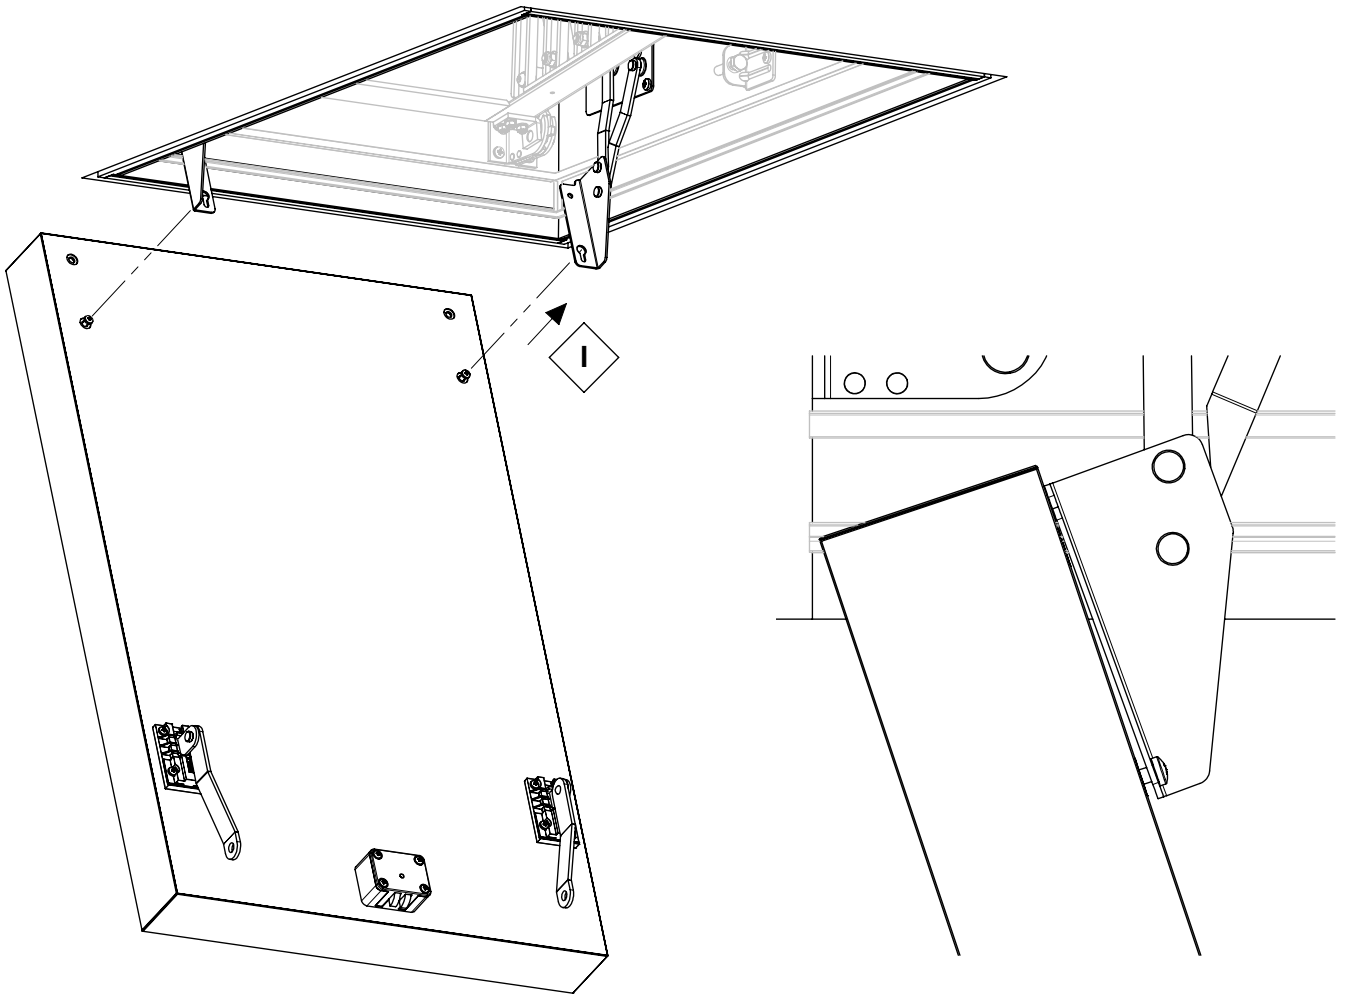





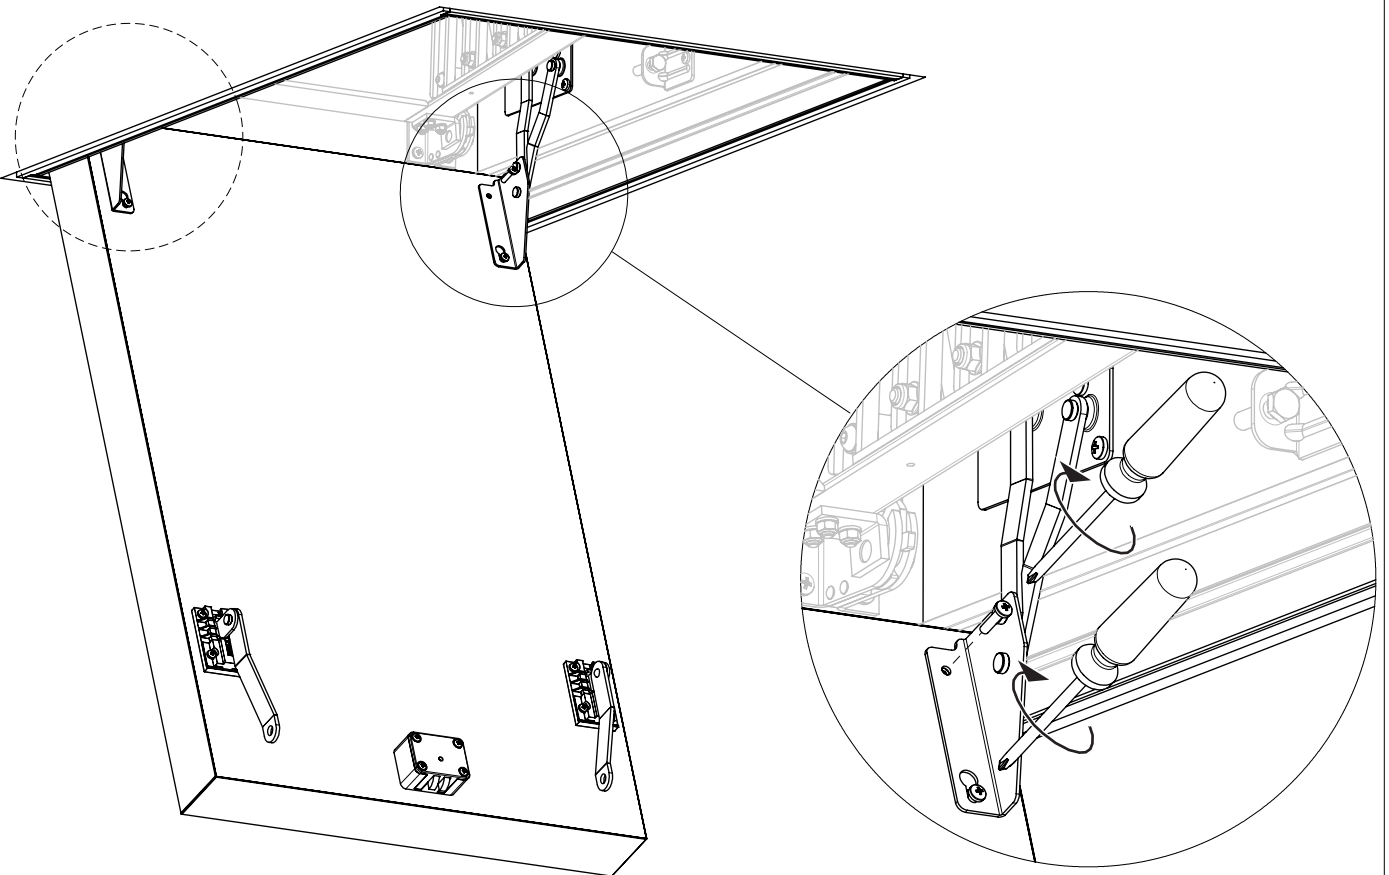
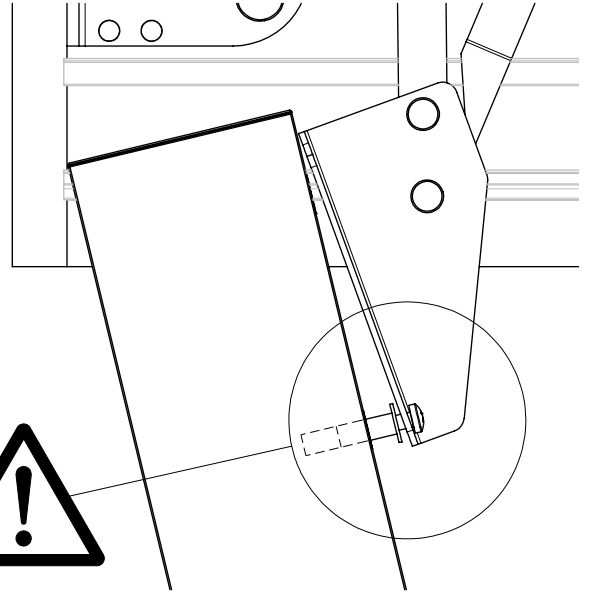
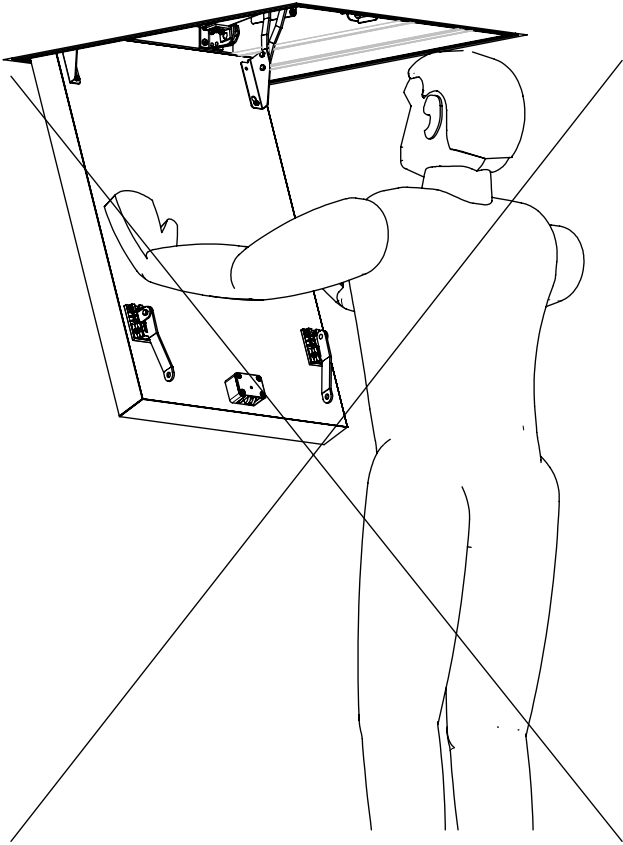


19









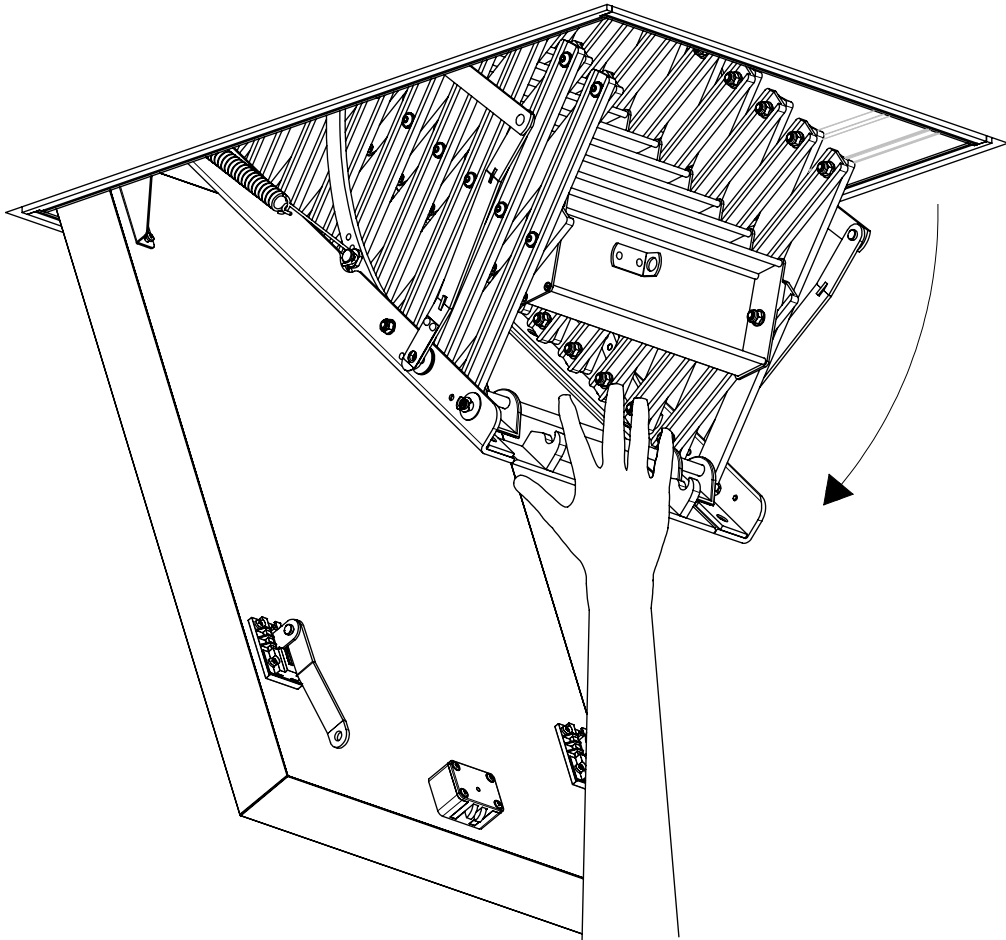


20

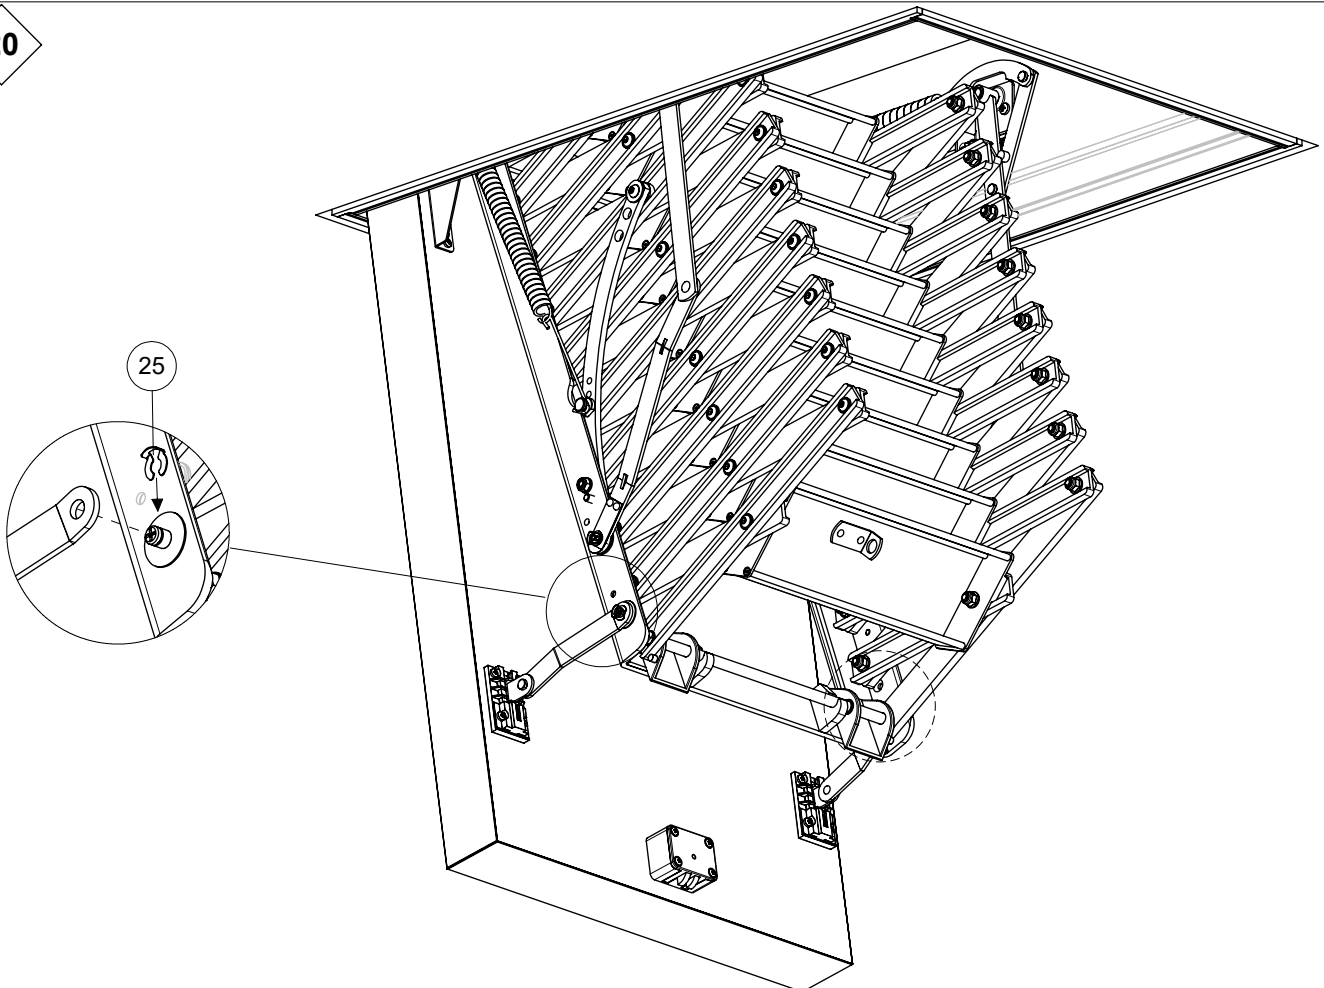


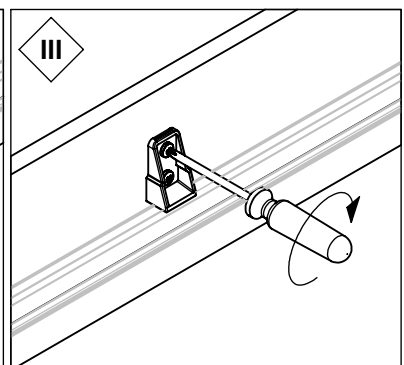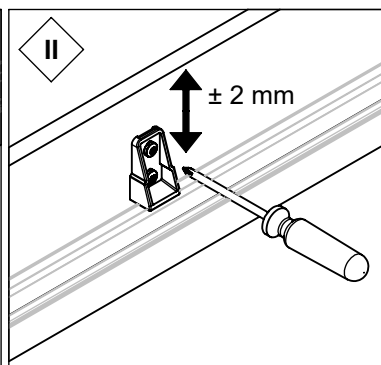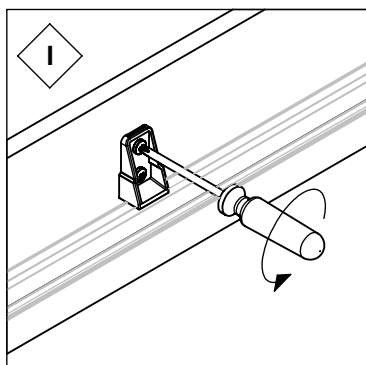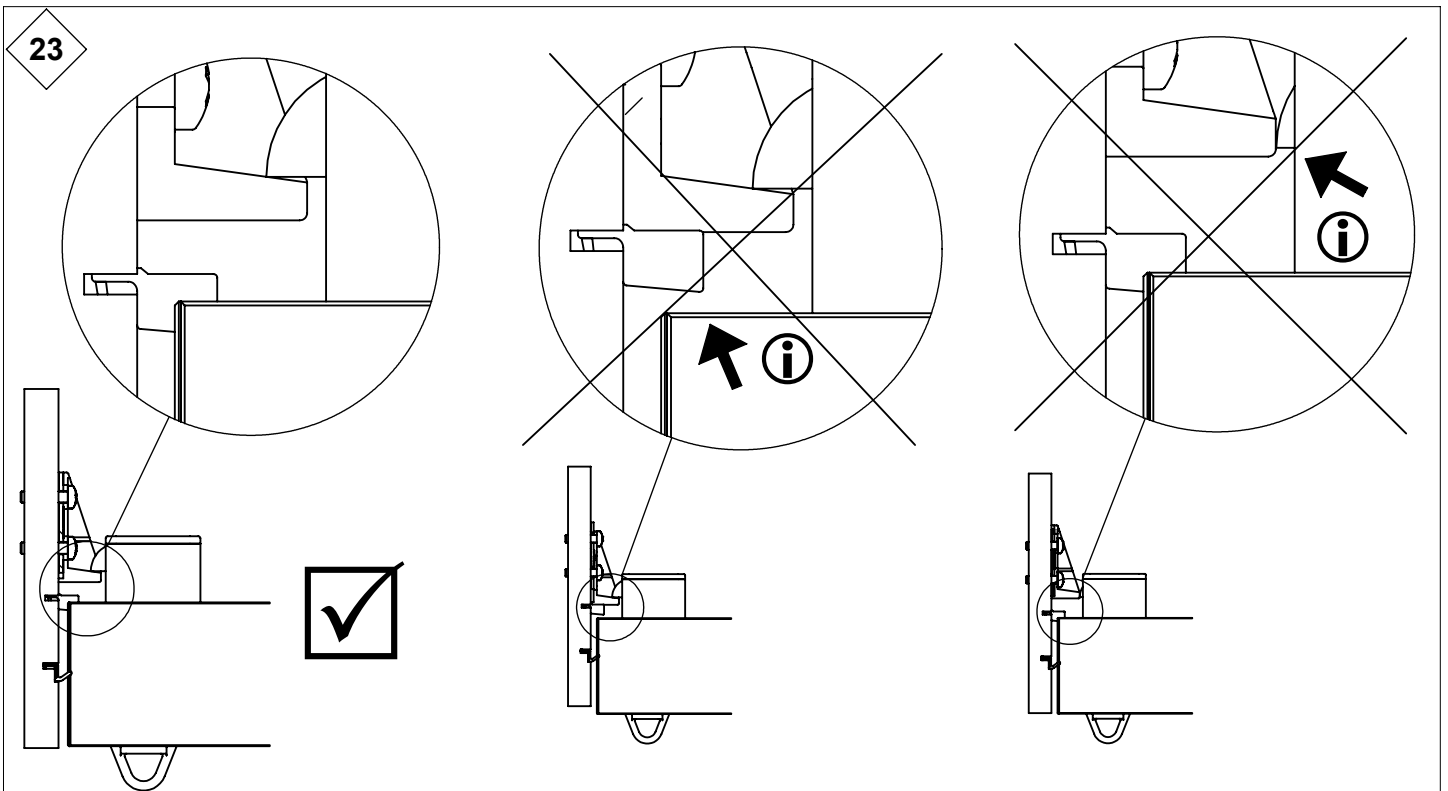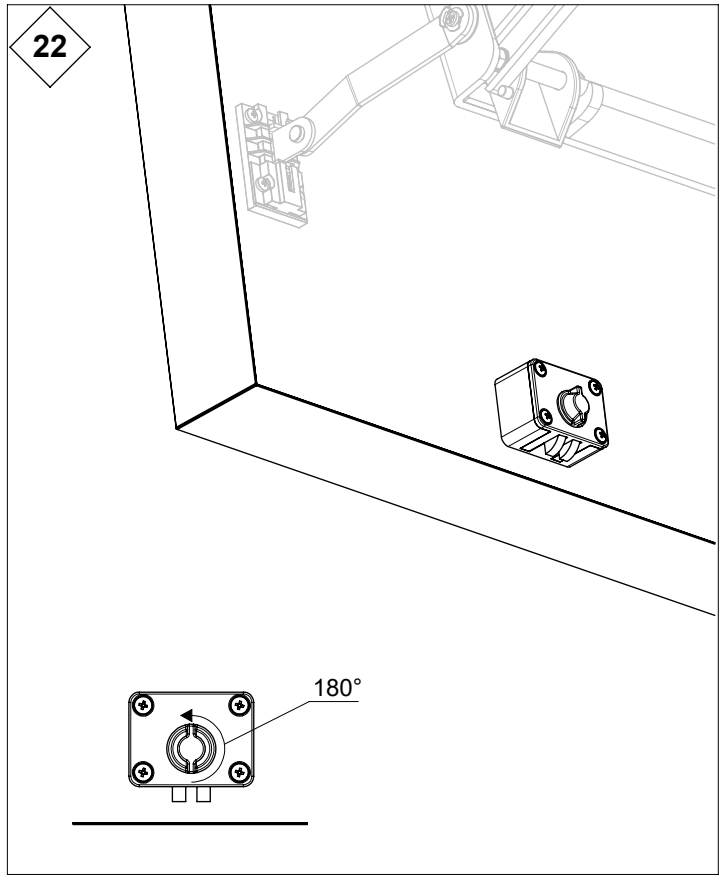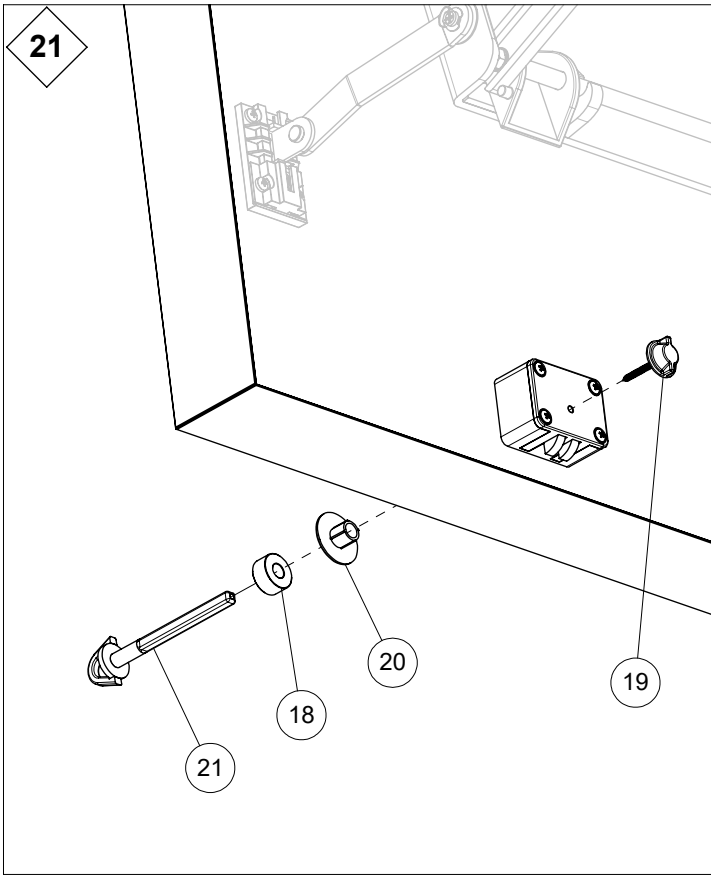


24

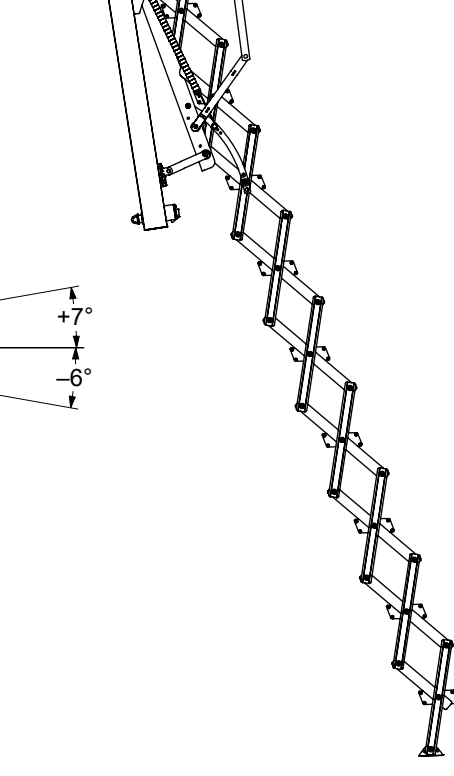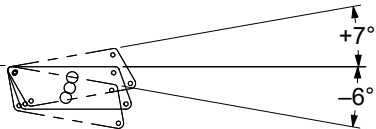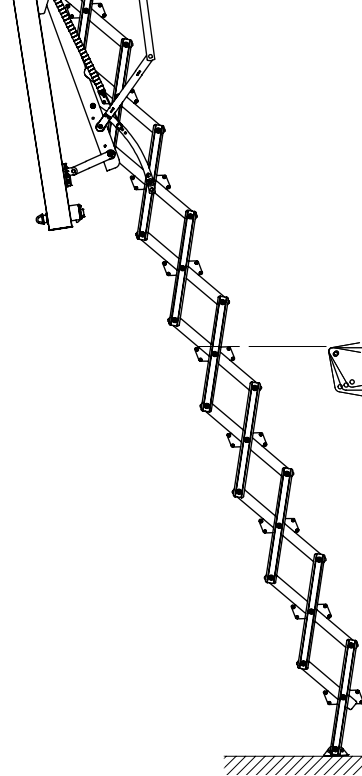
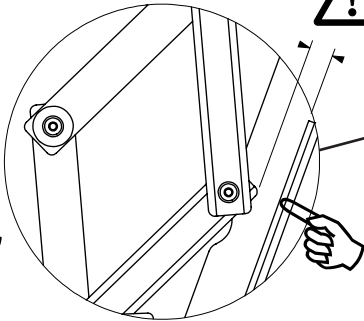
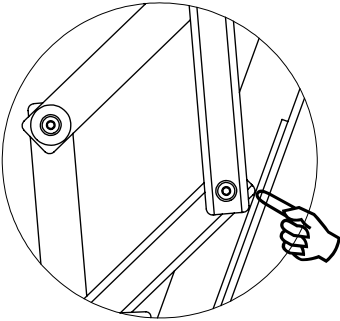
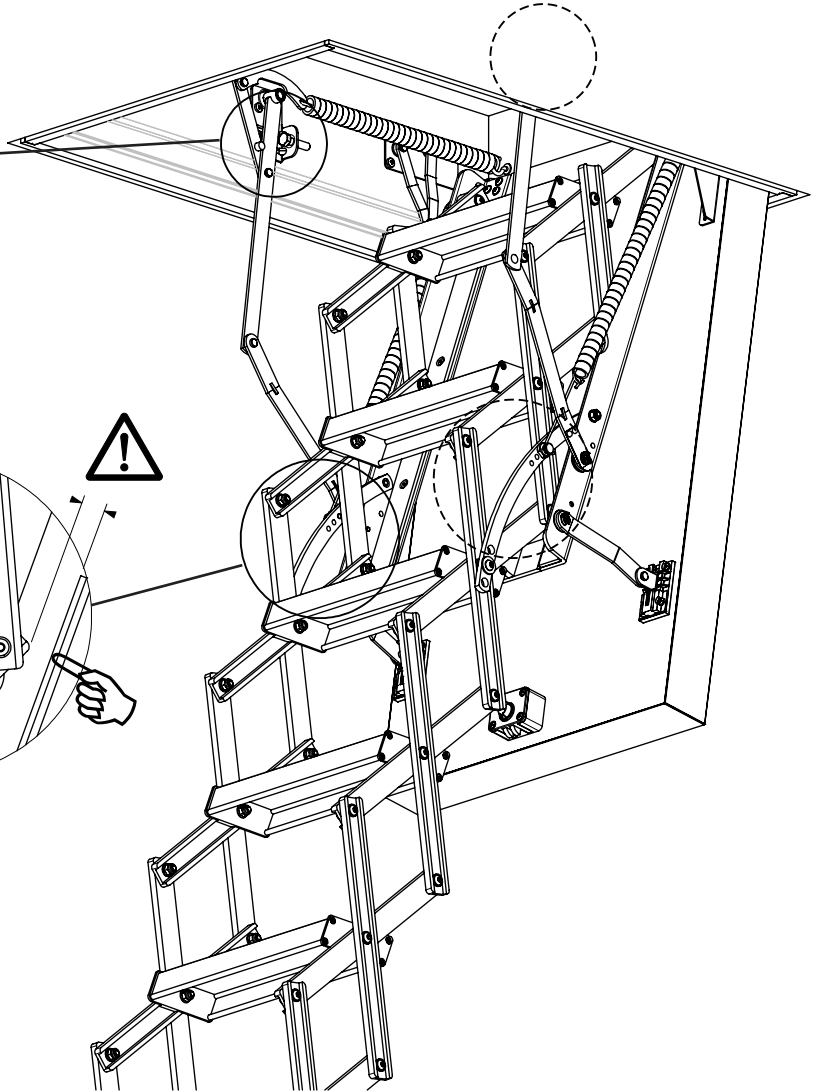
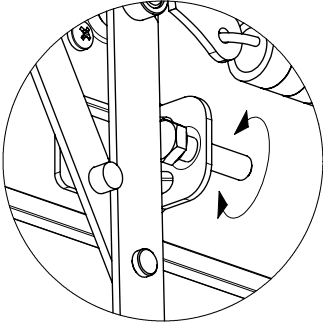


25

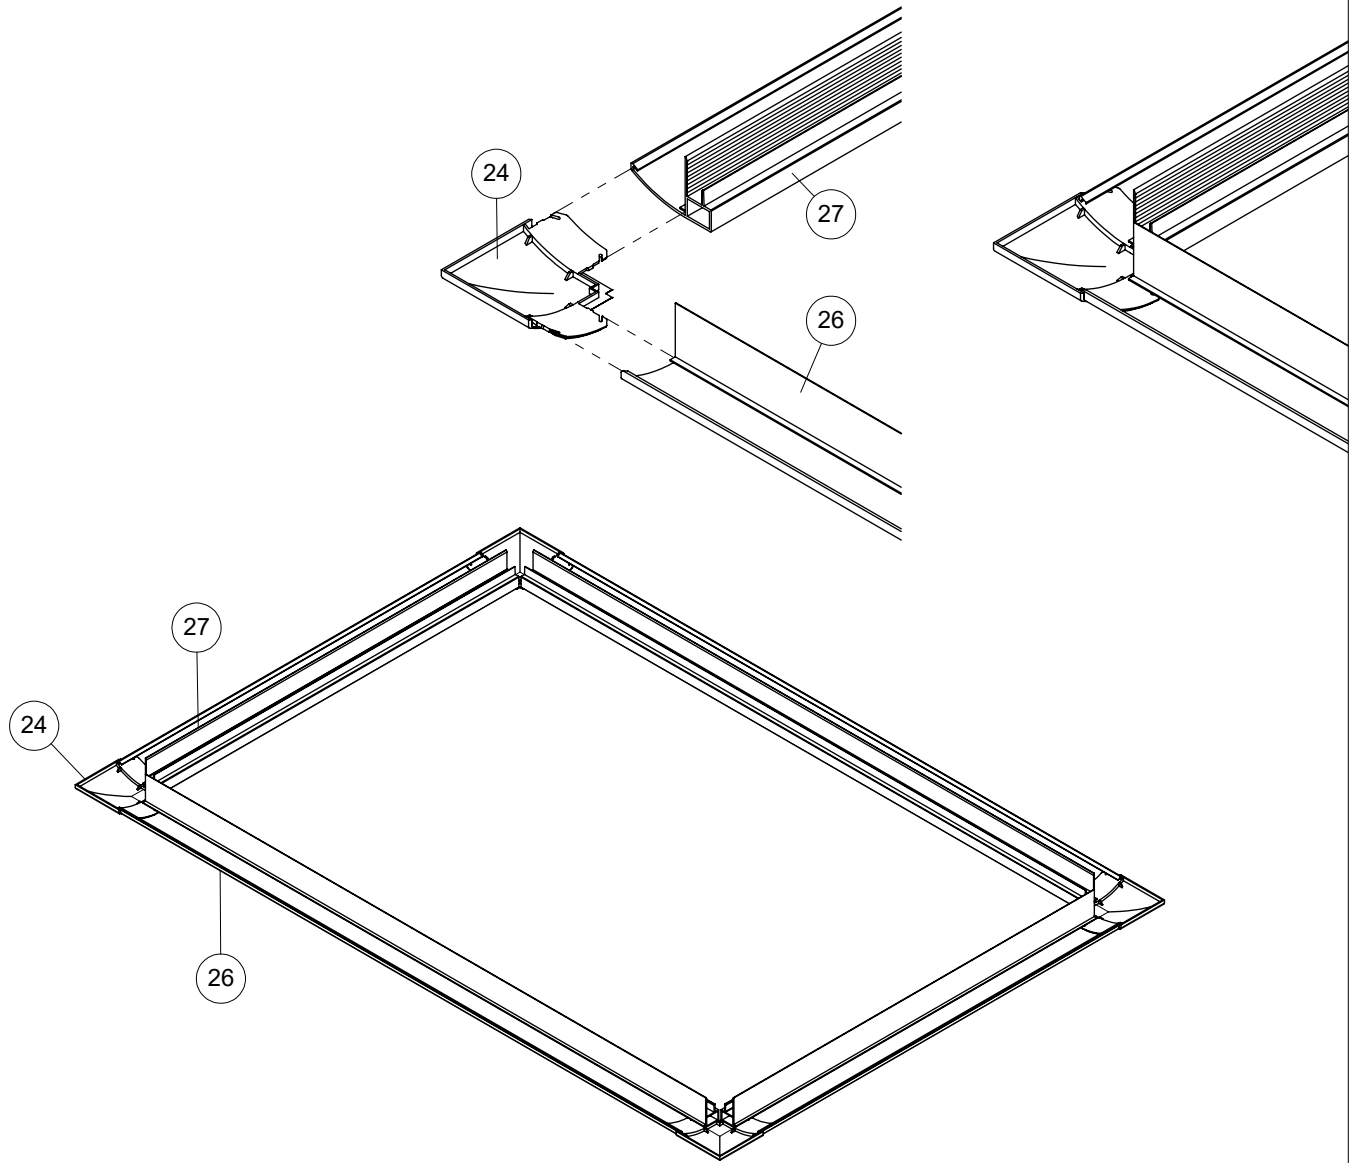


26

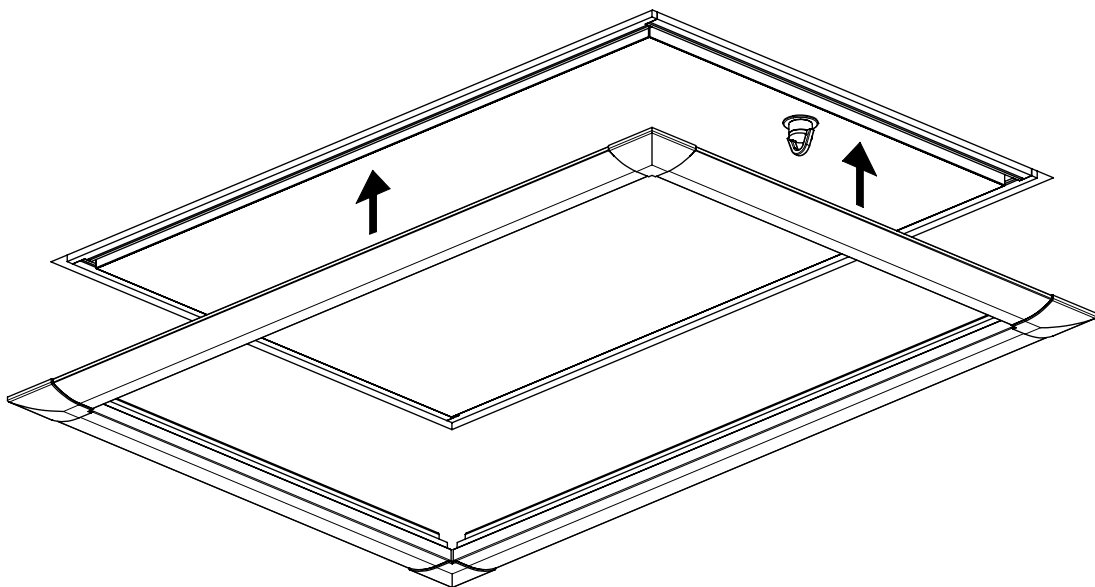


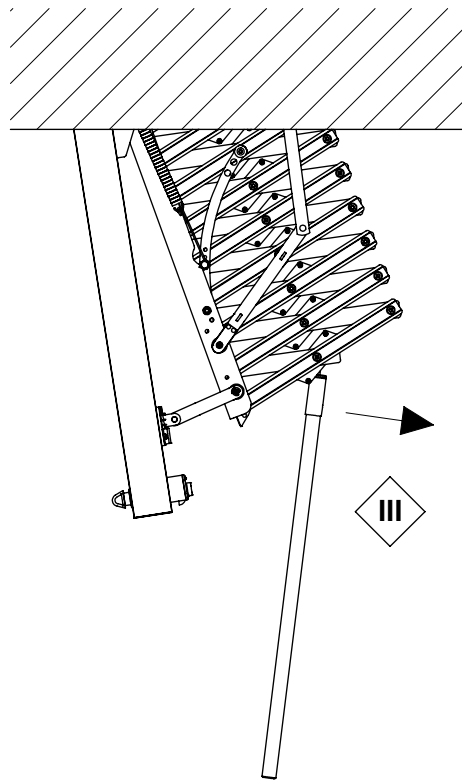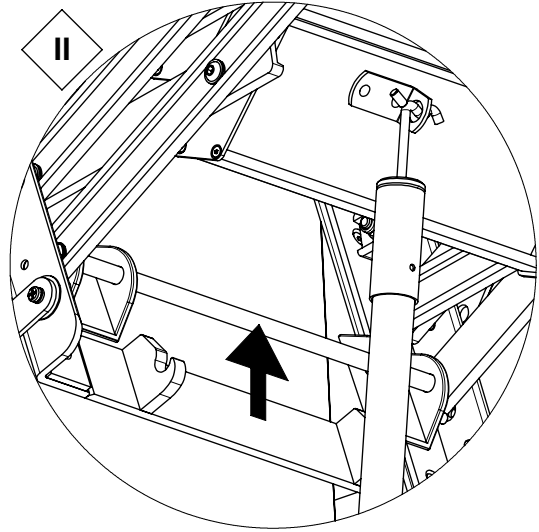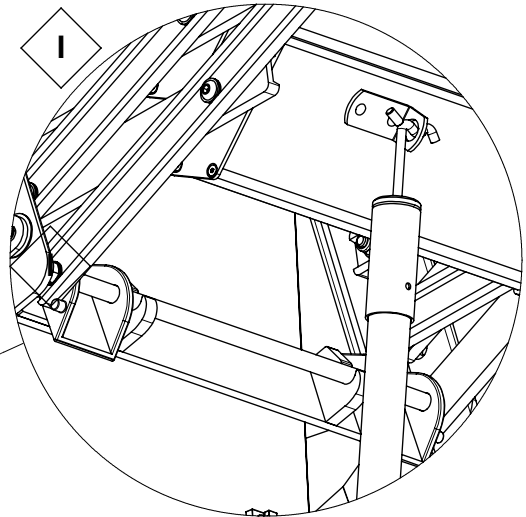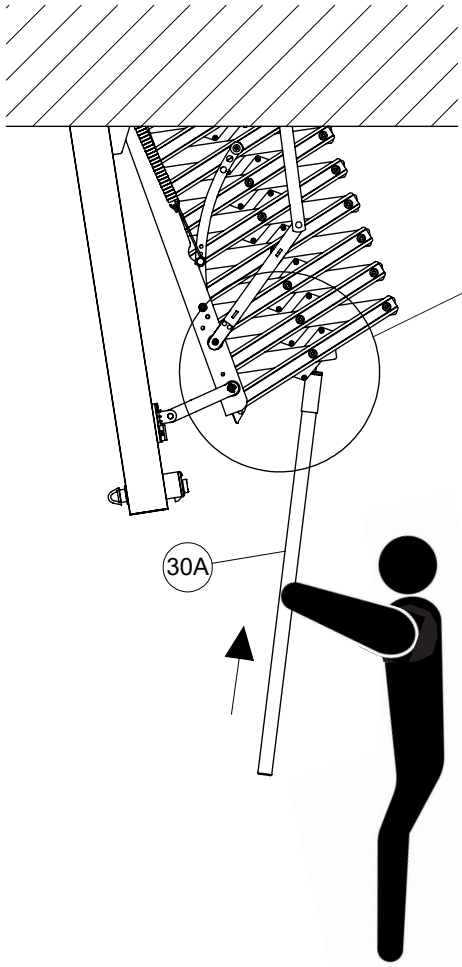


28

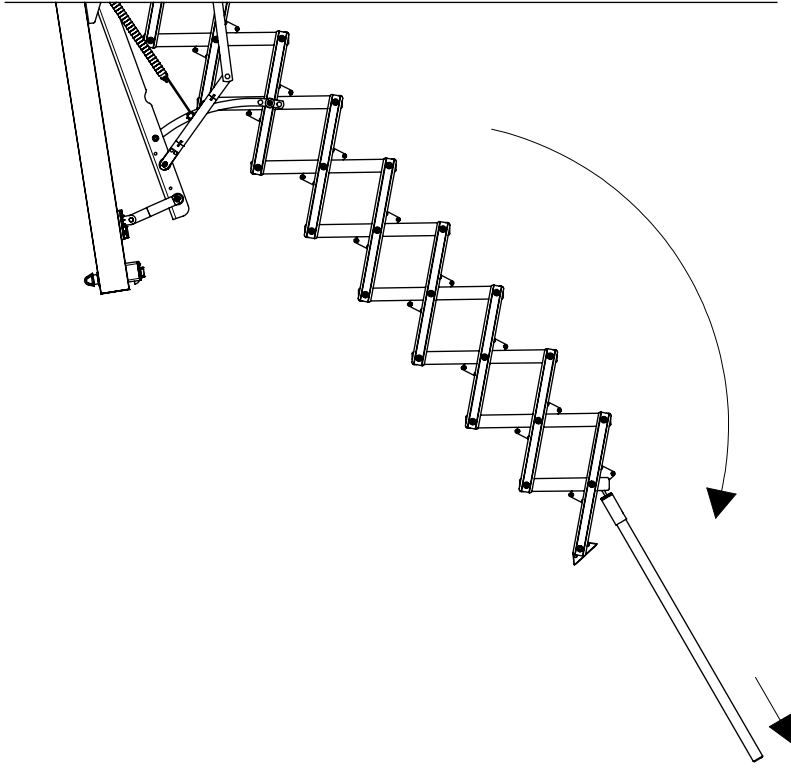


29

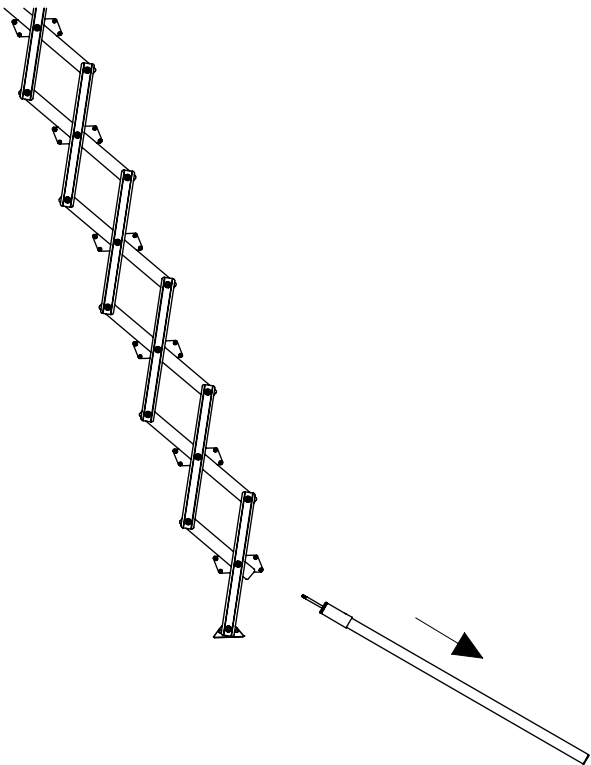

30

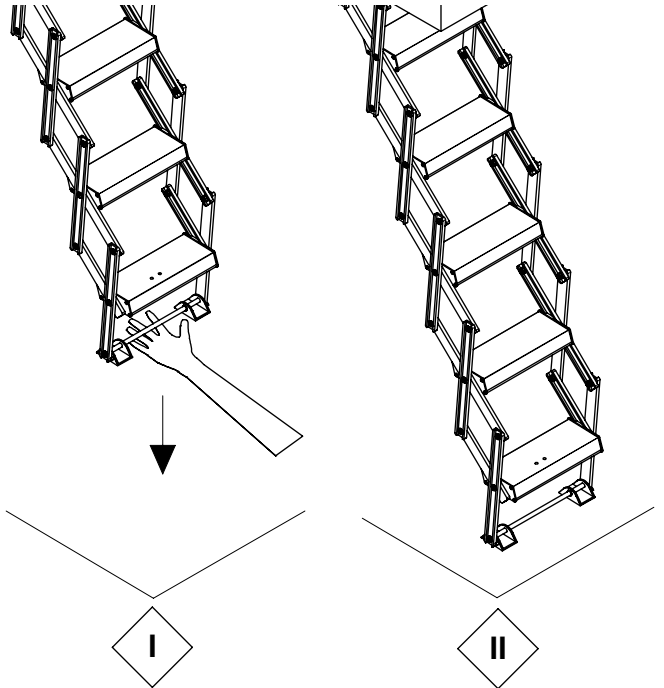

31

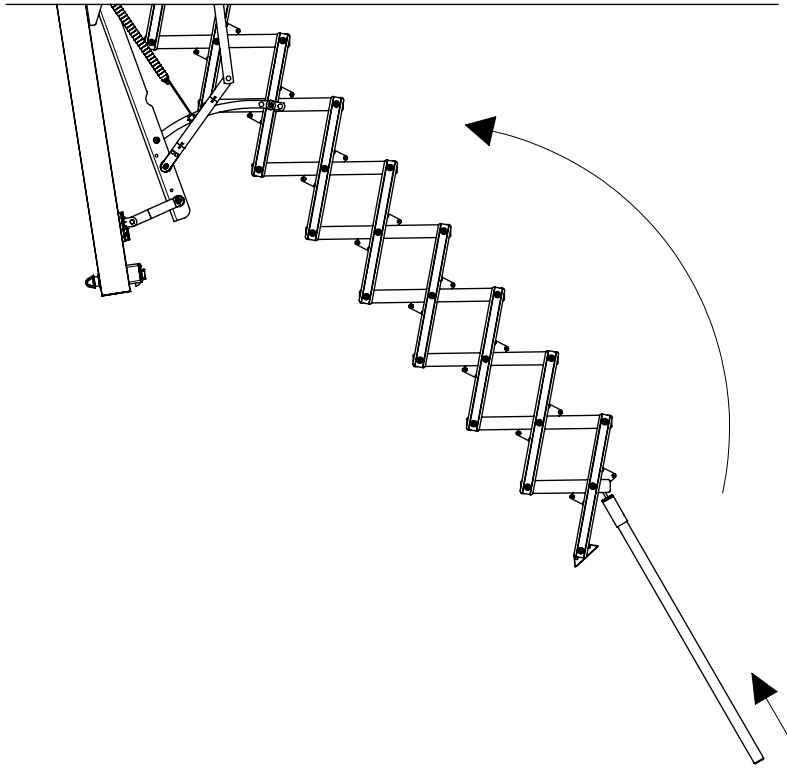

32

