

BRÜSTUNGSGELÄNDER























DESIGN

**INSTRUCTION / MONTAGEANLEITUNG
INSTRUKTION / INSTRUCCION / INSTRUKCJA**

Start kit / Corner kit
Anfangspaket / Eckenpaket

Startpakket / Hoekset
Kit de départ / Kit d'angle










Startpakke / Hjørnepakke


| | | | | | | |
|--|--|--|---|--|--|--|
| <p>8</p>  <p>x 3 K2-1077735 RAL 7016 K2-1077737 Pearl grey K2-1077738 RAL 9016</p> | <p>27</p>  <p>x 2 K1-1077720</p> | <p>31</p>  <p>x 10 K1-18099</p> | | | | |
| | <p>32</p>  <p>Ø 40</p> <p>x 1</p> |  <p>1000</p> <p>Beech / Buche / Beuken / Hêter / Bøg Oak / Eiche / Bijv / Chêne / Eg Oak white / Eiche weiß / Bijv wit / Chêne blanc / Eg hvid</p> | | | | |
| | <p>33</p>  <p>Ø 10</p> <p>x 5 K1-18051</p> |  <p>1000</p> | | | | |
| | <p>36</p>  <p>x 1 K2-1077155 RAL 7016 K2-1077157 Pearl grey K2-1077158 RAL 9016</p> | <p>37</p>  <p>x 1 K2-1077184</p> <p>Polished Poliert Gepolijst Poli Poleret</p> | <p>38</p>  <p>Ø 40,2</p> <p>x 1 K1-01620</p> | | | |
| | <p>39</p>  <p>x 5 K2-35426</p> | <p>40</p>  <p>x 6 K3-08001 Ø12 x 60</p> | <p>41</p>  <p>x 6 K3-04001 Ø10</p> | <p>42</p>  <p>x 6 K3-06338 Ø10 x 70</p> | <p>47</p>  <p>x 2 R3-91415 Ø8 x 40</p> | |
| <p>49</p>  <p>x 1 K3-08002 Ø8 x 40</p> | <p>50</p>  <p>Ø 8</p> <p>x 1 K1-01810</p> | <p>51</p>  <p>x 3 K3-06239 Ø4,5 x 25 PZ2</p> | <p>56</p>  <p>x 2 K3-06290 Ø4,5 x 40</p> | <p>57</p>  <p>x 2 K3-06286 Ø5 x 50</p> | <p>59</p>  <p>Wood glue Holzkleber Colle à bois Trælim Houtlijm</p> <p>x 1 K3-90005</p> | |
| <p>60</p>  <p>Strong glue Superkleber Seconde lijm Colle forte Superlim</p> <p>x 1 K3-90005</p> | | | | | | |

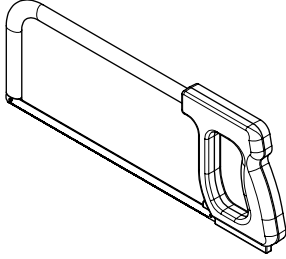
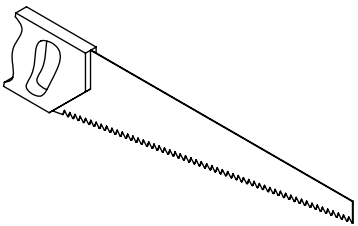

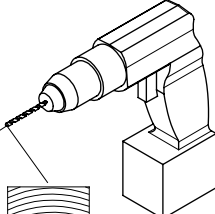




**Extension kit
Ergänzungspaket**

**Uitbreidingsset
Kit de suite**

Forlængerpakke

| | | | | | | | |
|---|---|---|---|---|---|---|--|
| <p>8</p>  | <p>30</p>  <p>x 5 K3-08023</p> | | | | | | |
| | <p>32</p>  <p>Ø 40</p> <p>1000</p> <p>Beech / Buche / Beuken / Hêter / Bøg Oak / Eiche / Bijv / Chêne / Eg Oak white / Eiche weiß / Bijv wit / Chêne blanc / Eg hvid</p> | | | | | | |
| | <p>33</p>  <p>Ø 10</p> <p>1000</p> | | | | | | |
| | <p>x 5 K1-18051</p> | <p>40</p>  <p>x 4 K3-08001 Ø12 x 60</p> | <p>41</p>  <p>x 4 K3-04001 Ø10</p> | <p>42</p>  <p>x 4 K3-06338 Ø10 x 70</p> | <p>47</p>  <p>x 2 R3-91415 Ø8 x 40</p> | <p>48</p>  <p>x 2 K3-06239 Ø4,5 x 25 PZ2</p> | |
| <p>x 2 K2-1077735 RAL 7016 K2-1077737 Pearl grey K2-1077738 RAL 9016</p> | | | | | | | |

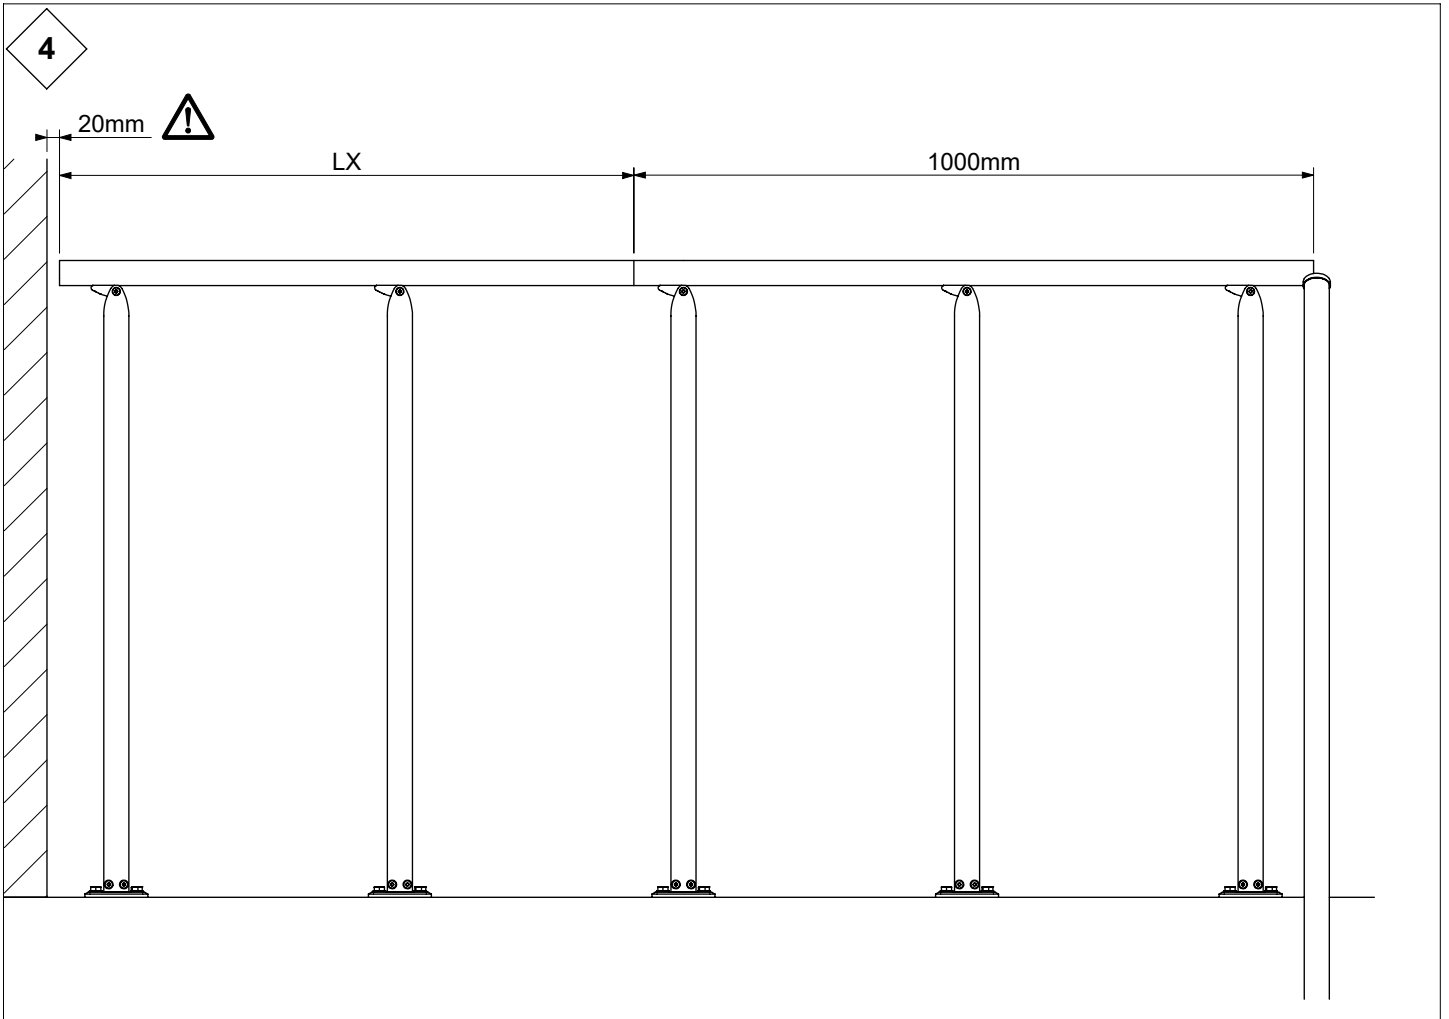
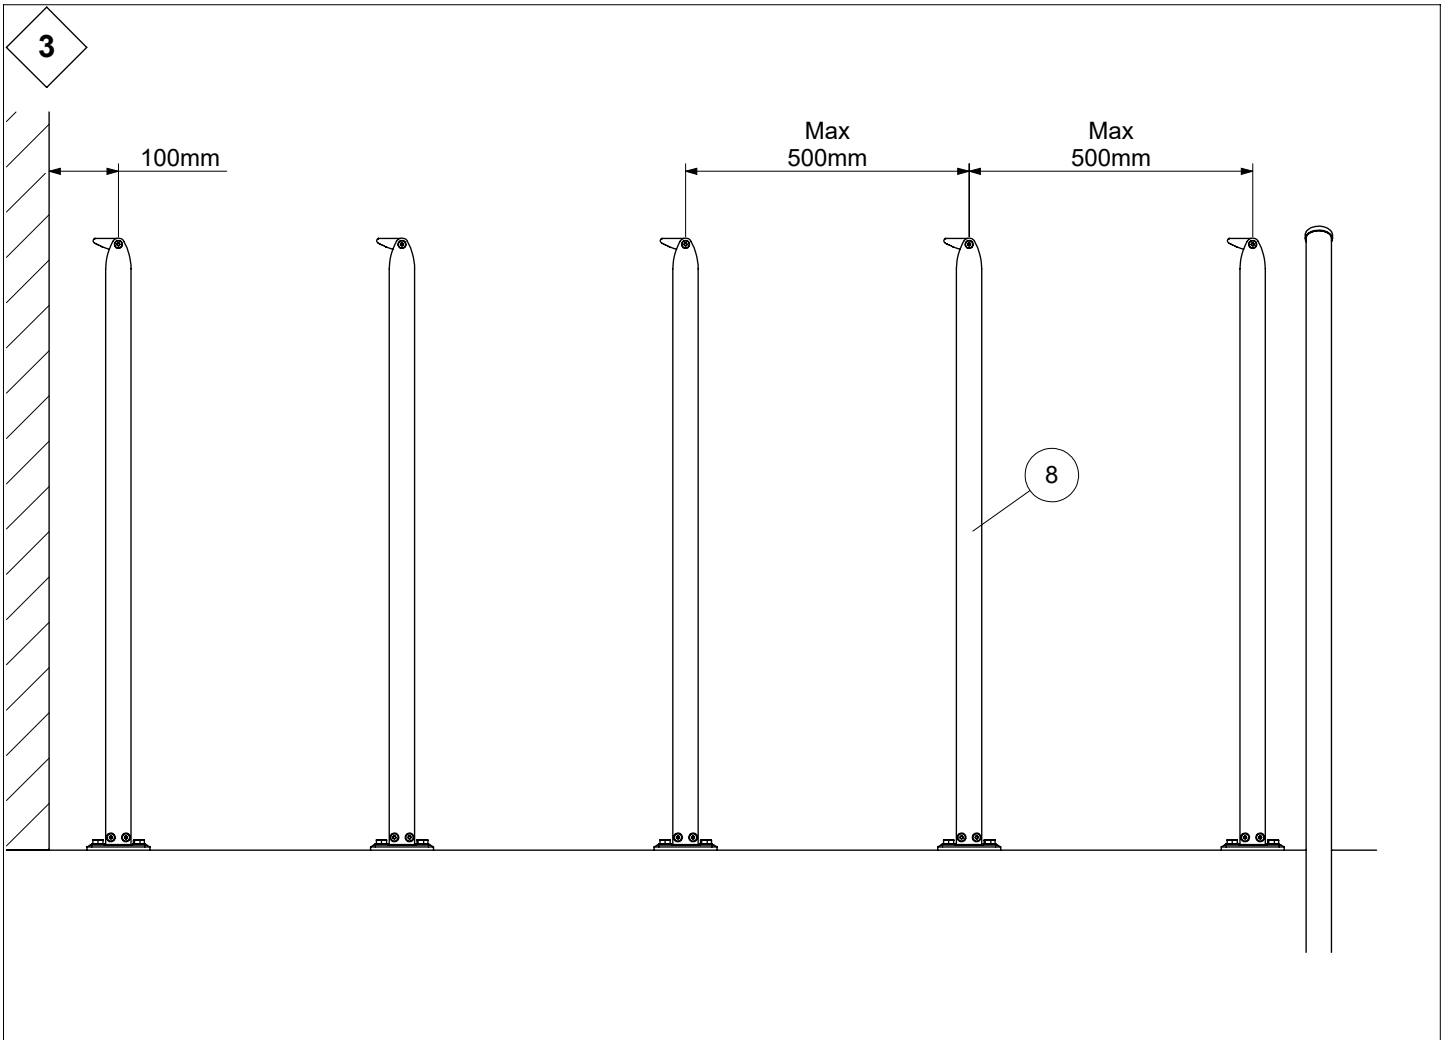
 Tools not included!
Werkzeuge nicht enthalten!
Gereedschap niet inbegrepen!
Outils non inclus!
Værktøj ikke inkluderet!

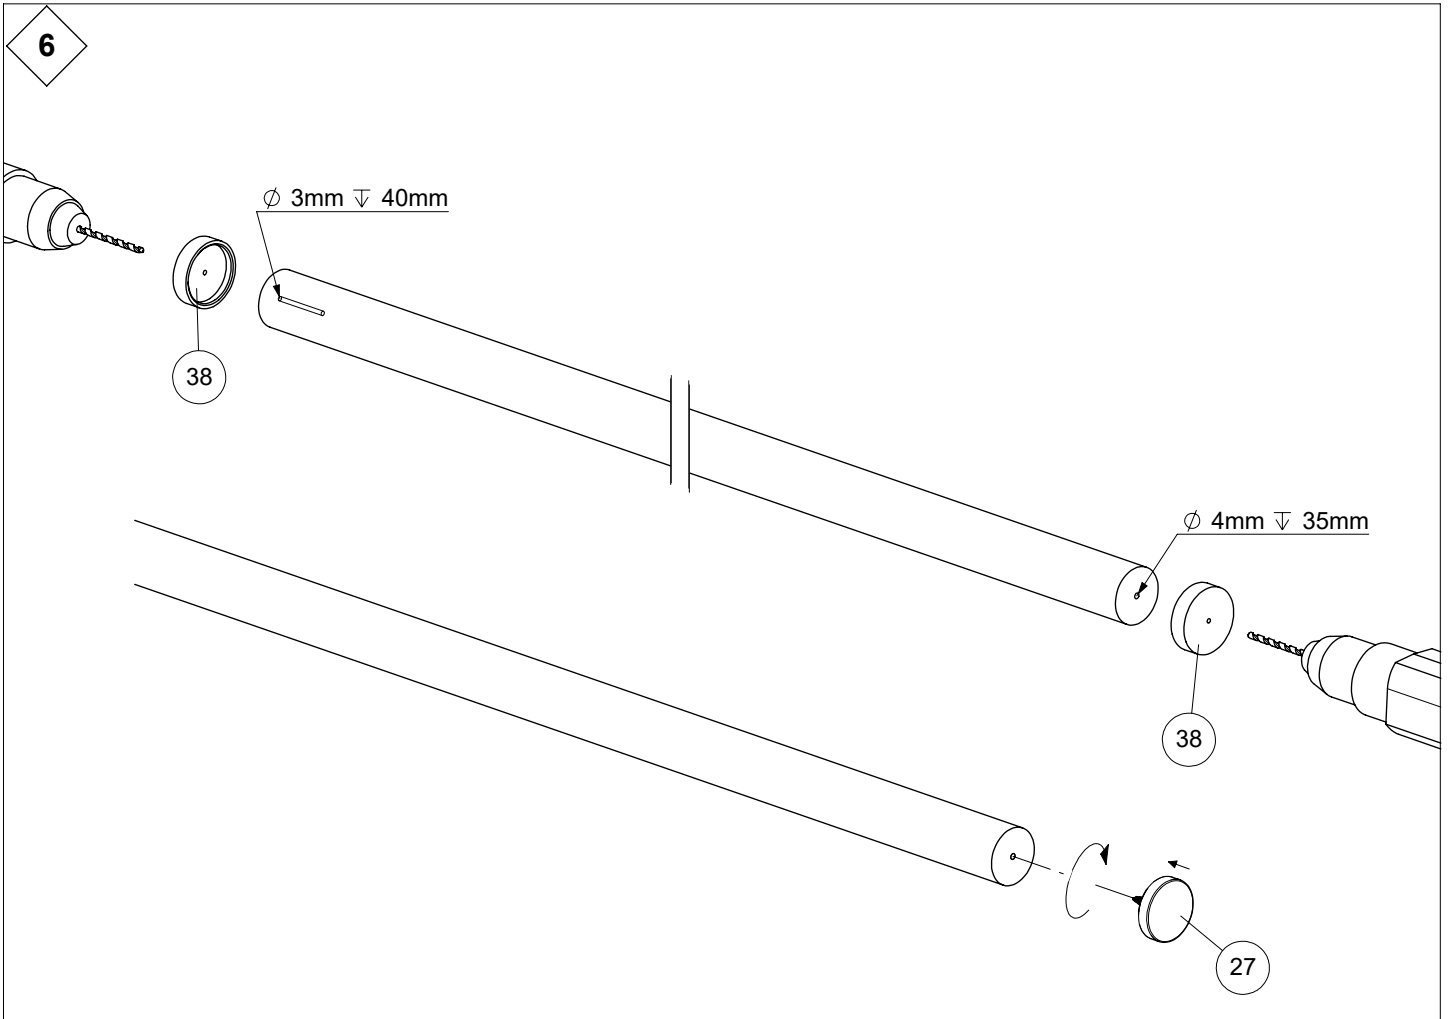
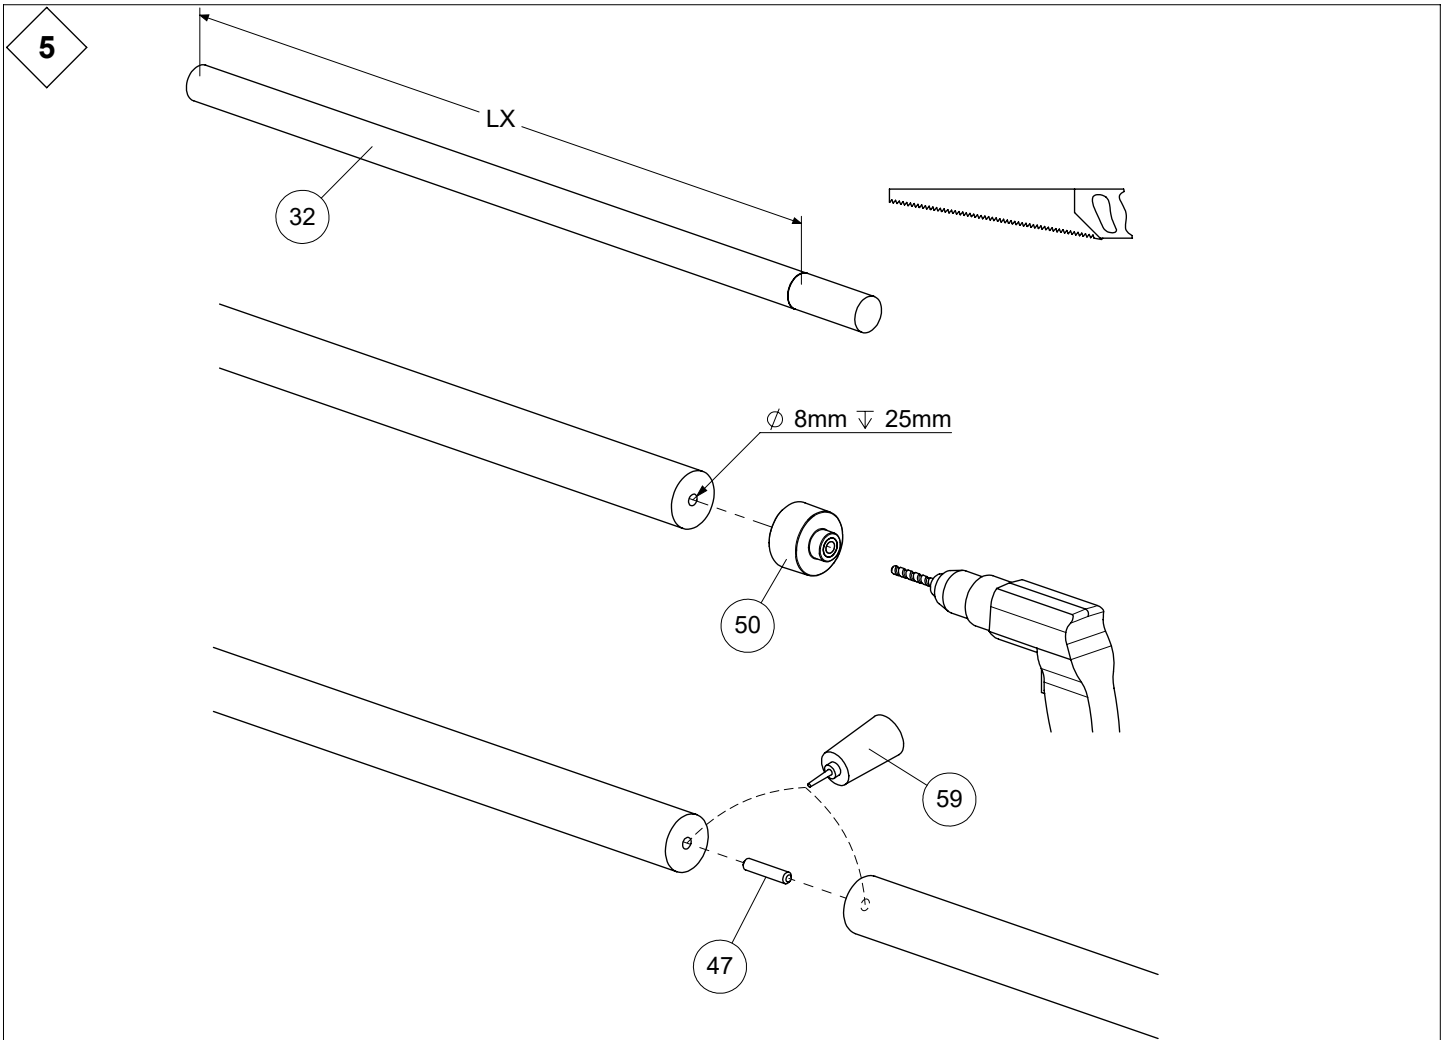









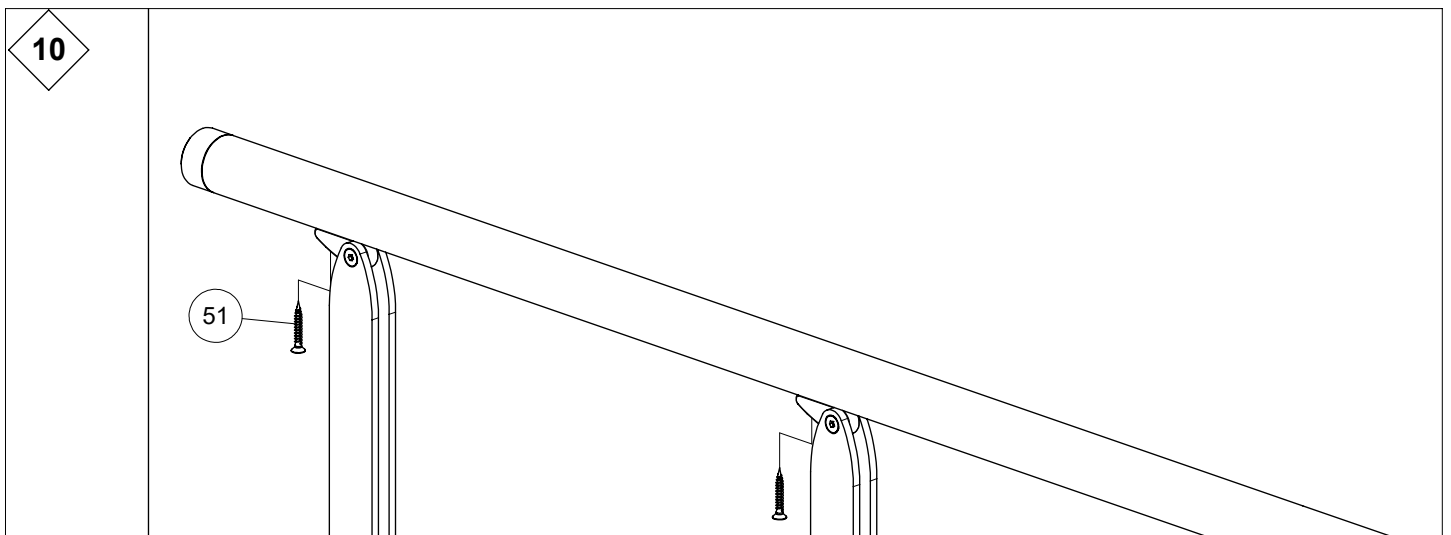
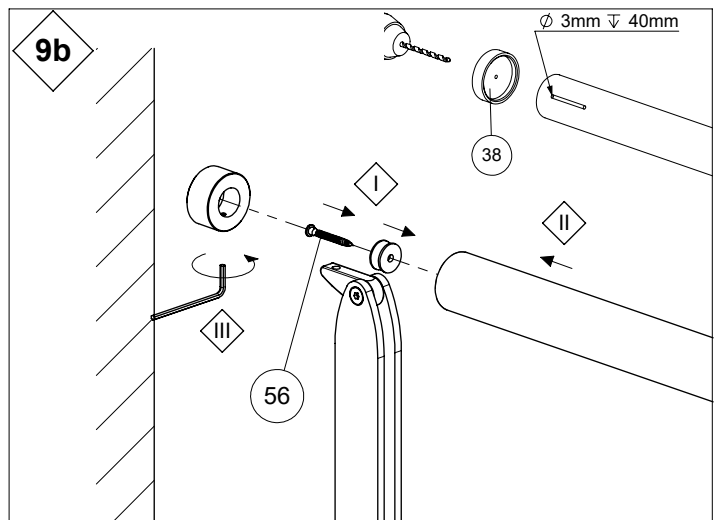
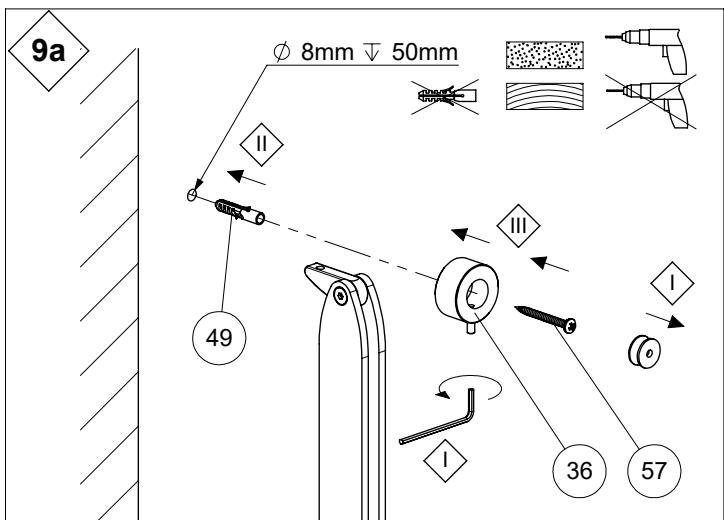
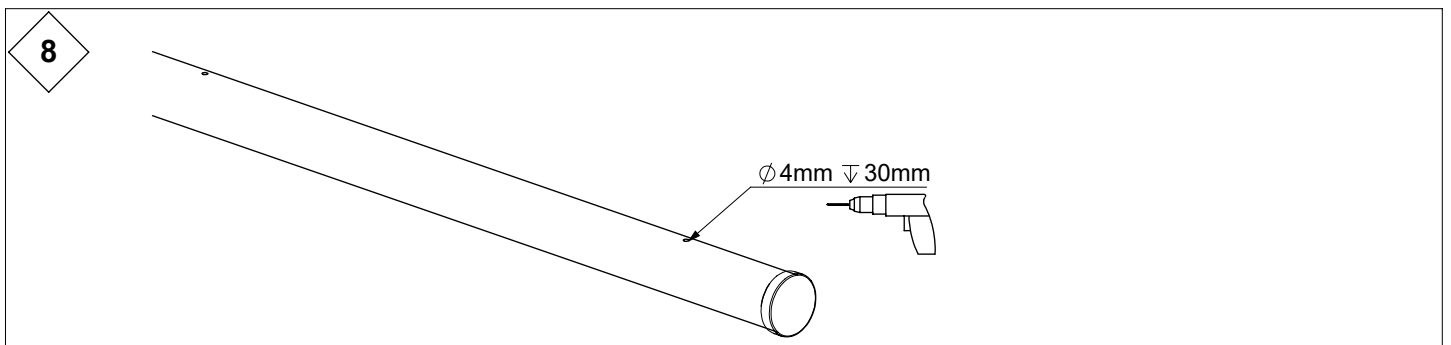
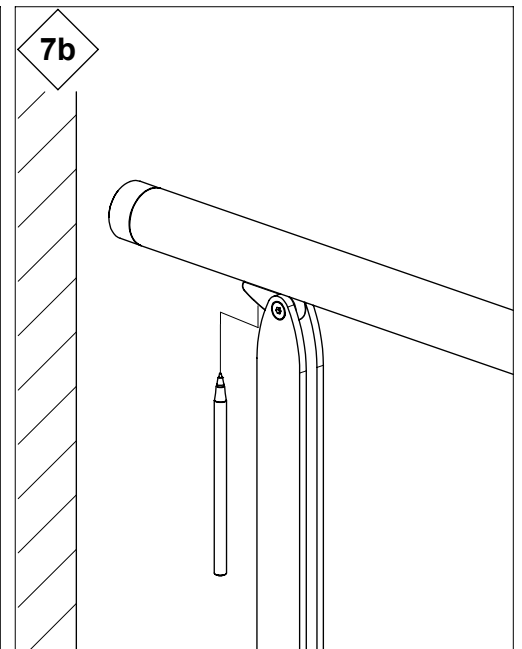
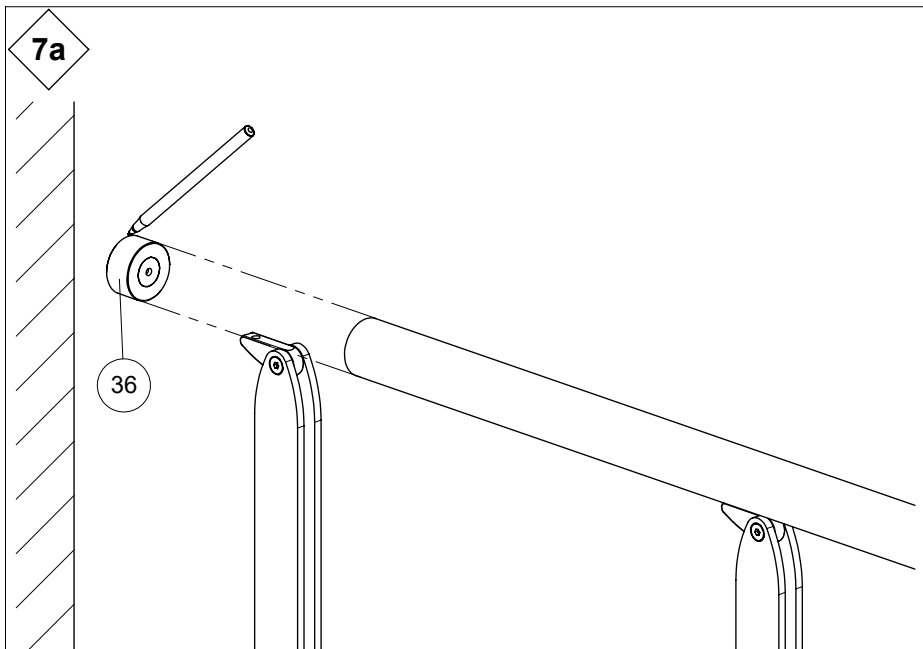
Ø 8mm Ø 3mm
 Ø 12mm Ø 4mm
 Ø 6mm

PZ2
 TX20
 TX25

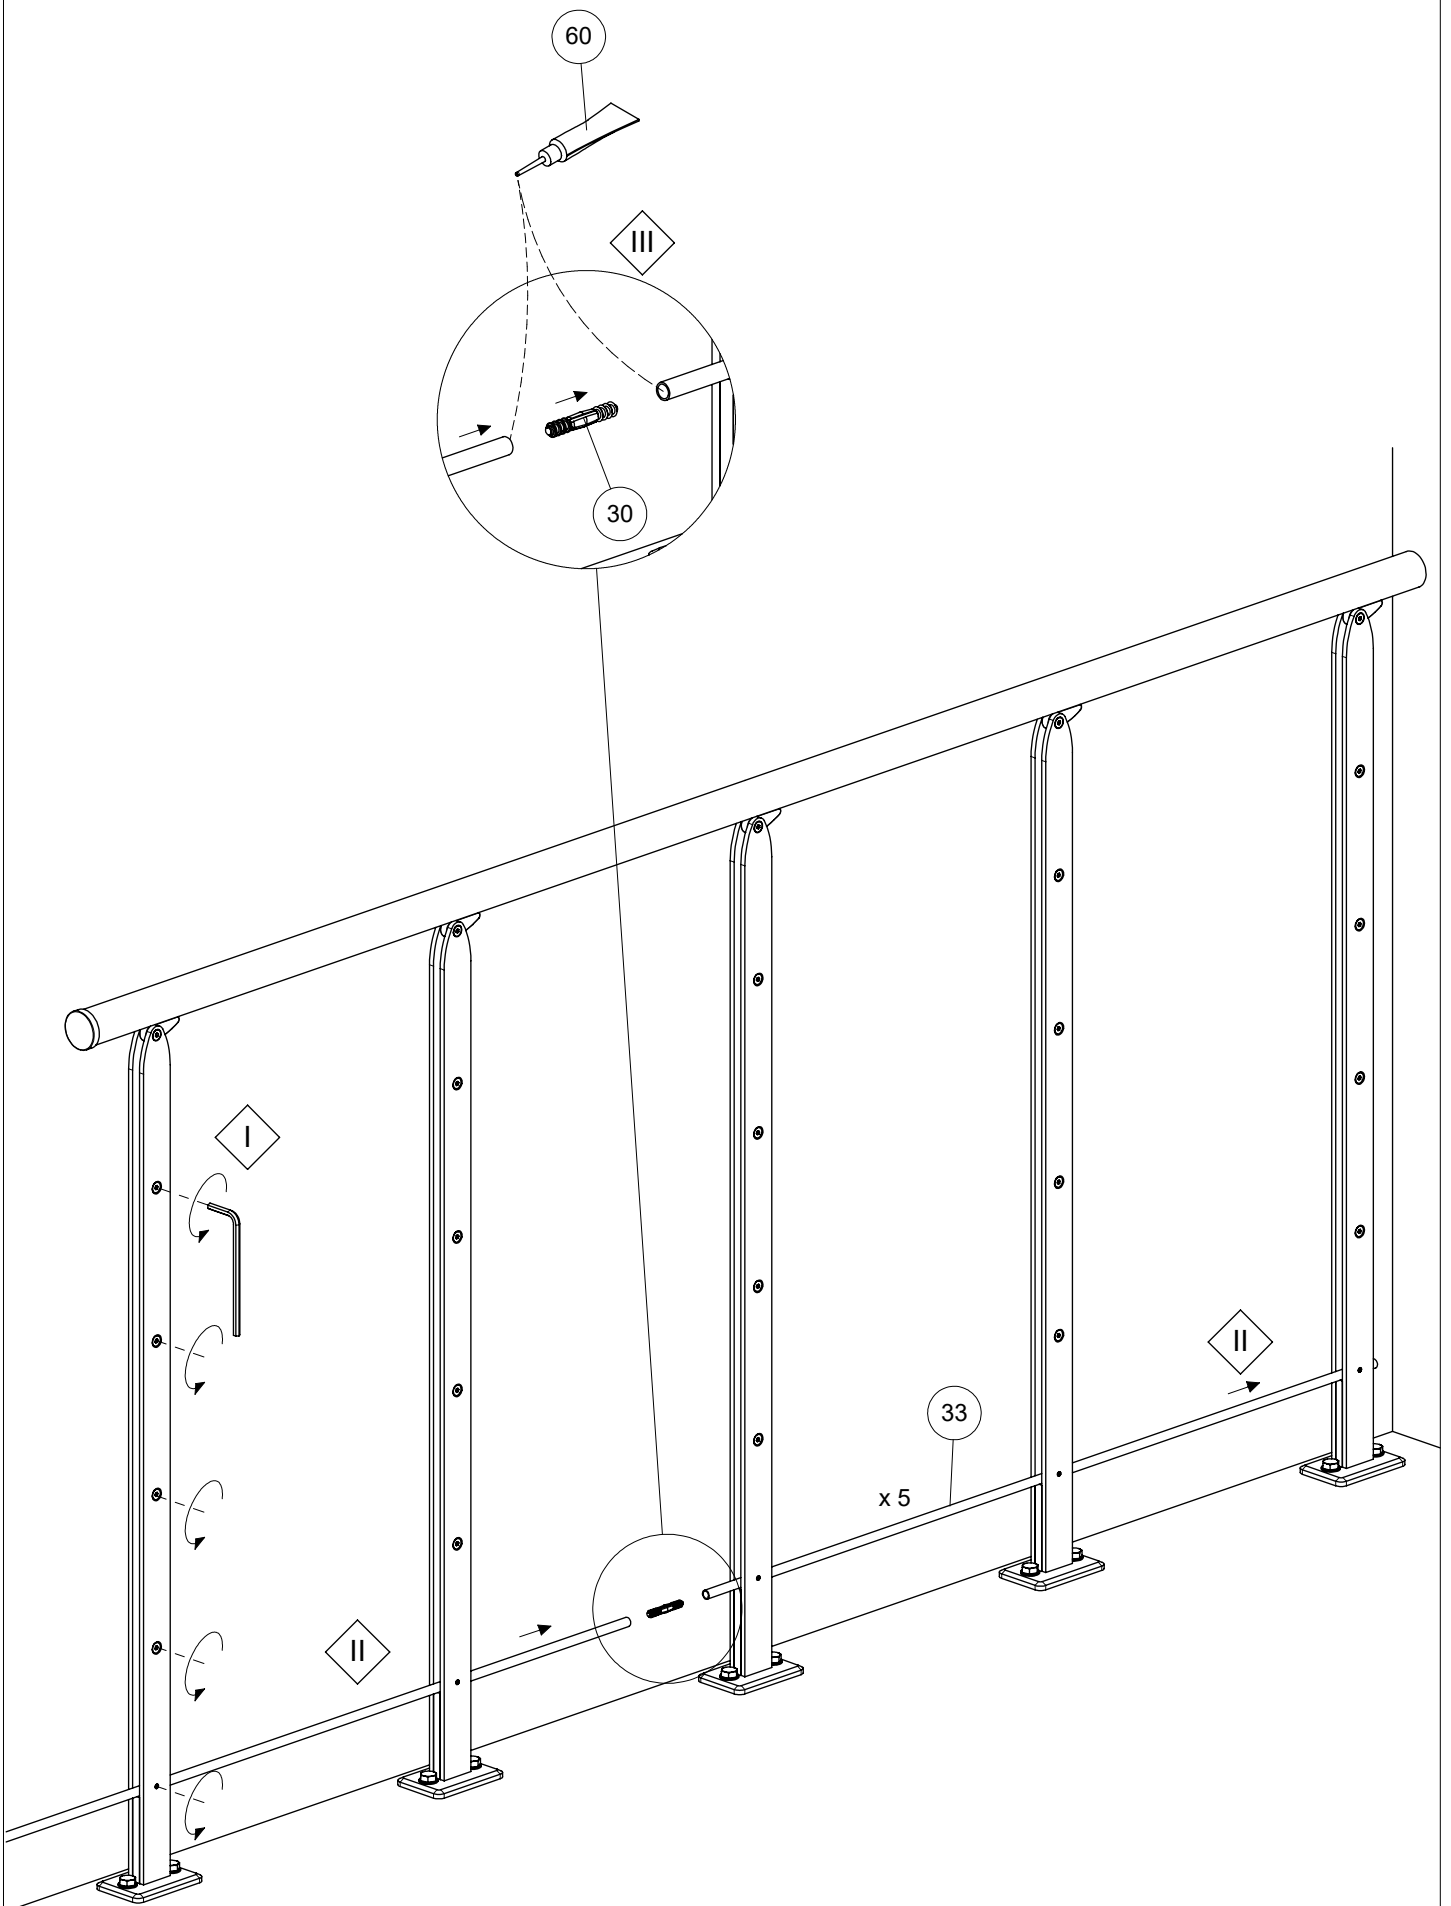
17mm
 2,5 mm
 4 mm



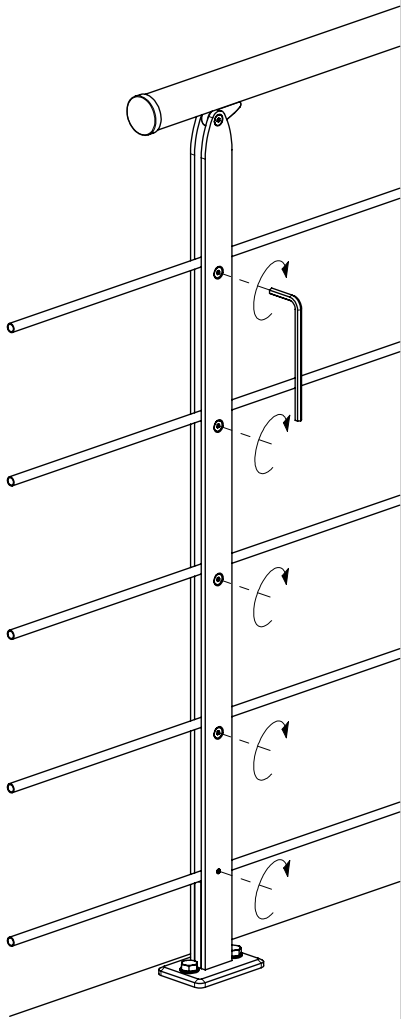




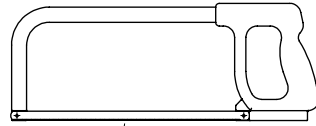
11



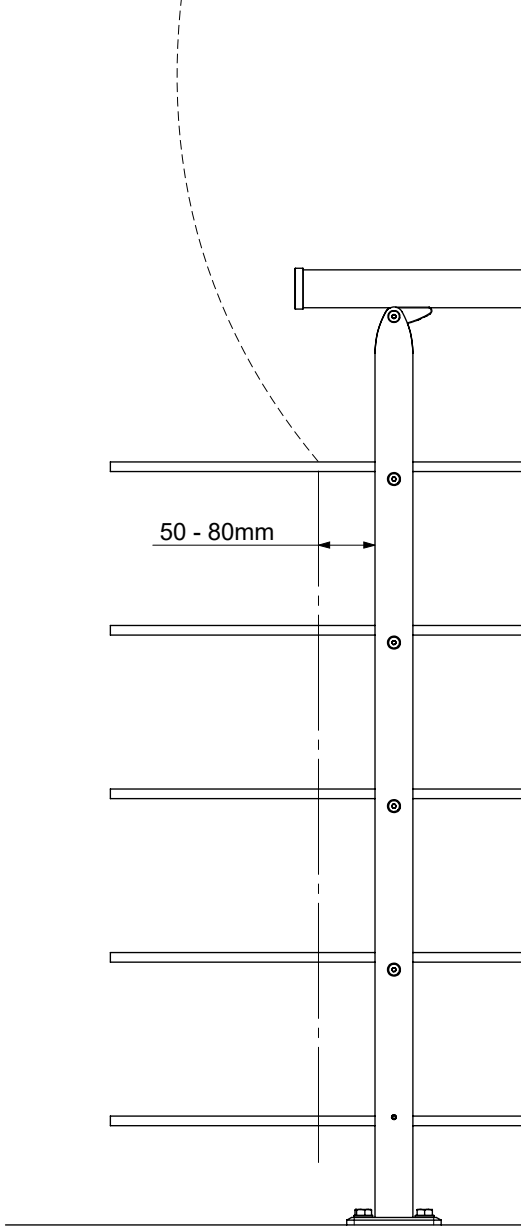
12



13

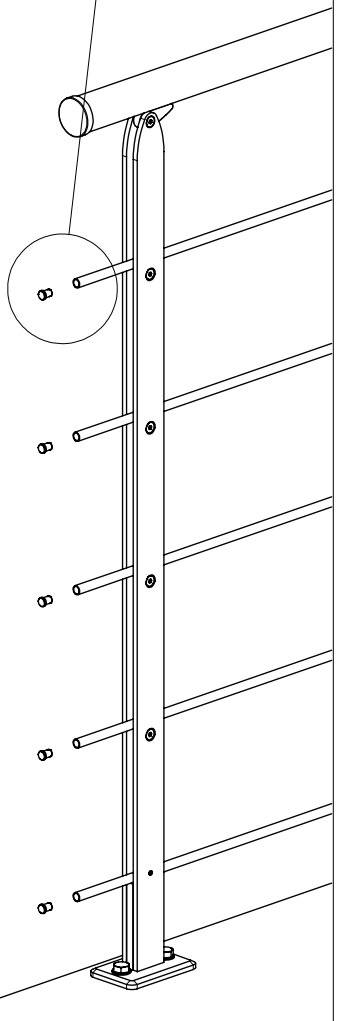
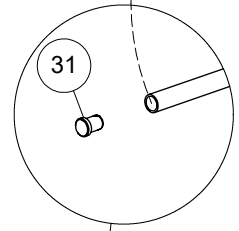


50 - 80mm

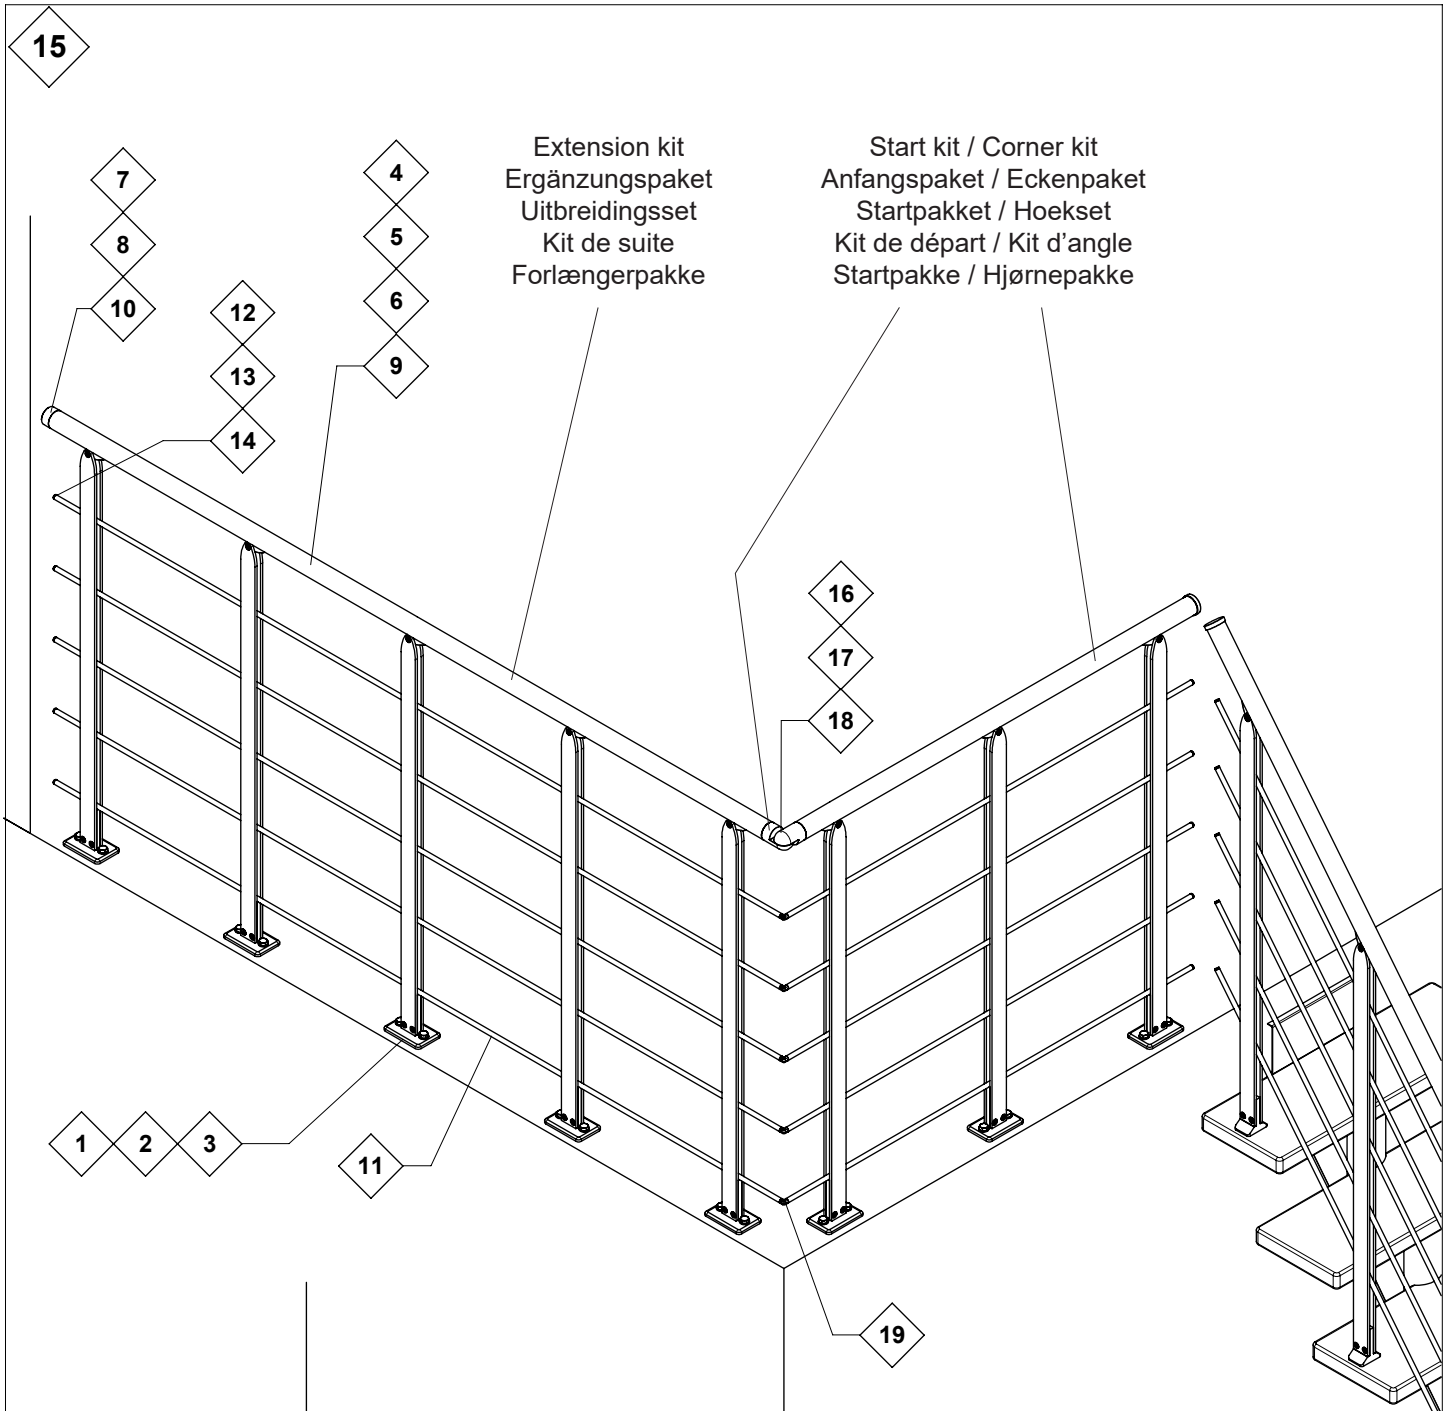


14

49



15



Extension kit
Ergänzungspaket
Uitbreidingsset
Kit de suite
Forlængerpakke

Start kit / Corner kit
Anfangspaket / Eckenpaket
Startpakket / Hoekset
Kit de départ / Kit d'angle
Startpakke / Hjørnepakke

